


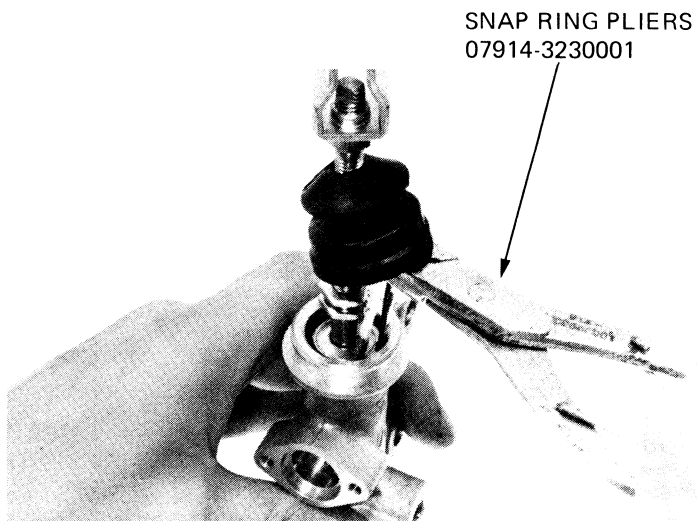

Remove the rubber cover.


Remove the circlip and push rod from the master cylinder body.



Remove the master piston, primary cup and spring.

It may be necessary to apply a small amount of air pressure to the fluid outlet to remove the master piston and primary cup.

Clean all parts with brake fluid.

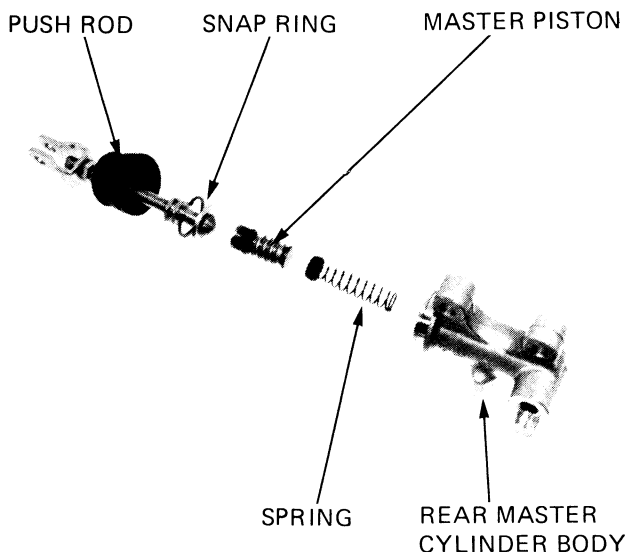

CYLINDER I.D. INSPECTION

Measure the inside diameter of the master cylinder bore.

SERVICE LIMIT: 14.055 mm (0.5533 in)

Check for scores, scratches or nicks.

PISTON O.D. INSPECTION

Measure the master piston O.D.

SERVICE LIMIT: 13.945 mm (0.5490 in)

Check the primary cup and secondary cup for damage.

