



## 4. REAR AXLE

### SERVICE INFORMATION

#### GENERAL INSTRUCTIONS

This section covers removal and installation of the rear axle.

A jack or block is required to support the ATC.

#### SPECIAL TOOL

Lock Nut Wrench 41 mm

07916-9180000 or commercially available 41 mm wrench

