



Remove the lower shock arm bolt mounting bolt.

Remove the lower shock arm bolt.

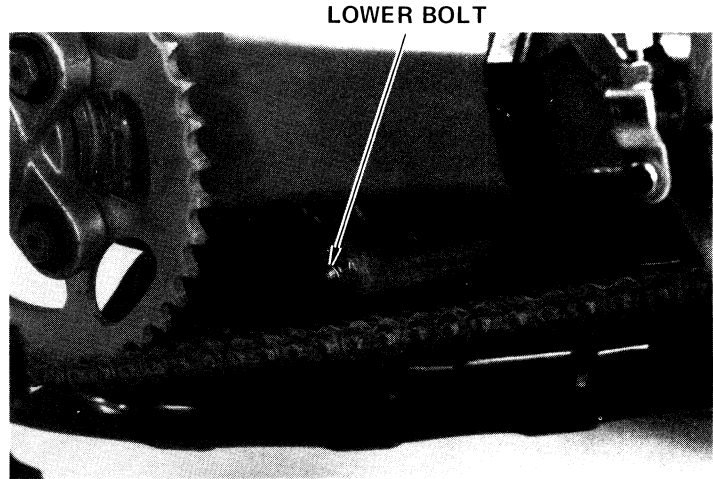

Remove the upper shock absorber mounting bolt.

Remove the swing arm pivot bolt, and pull the swing arm back away from the engine.

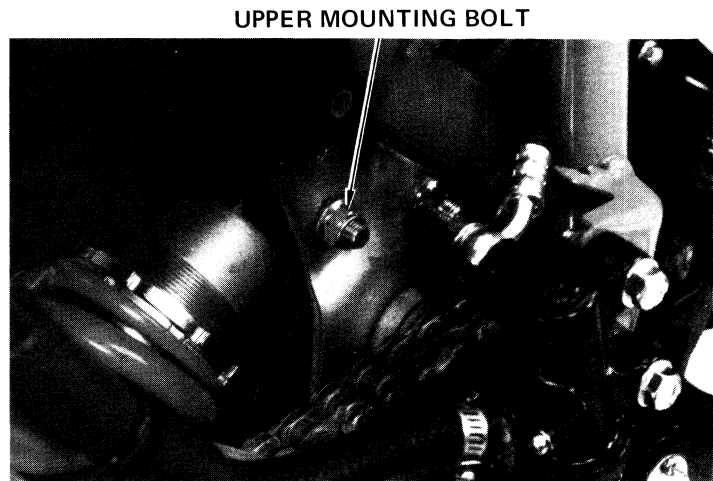

Remove the engine hanger bolts and the engine.

