


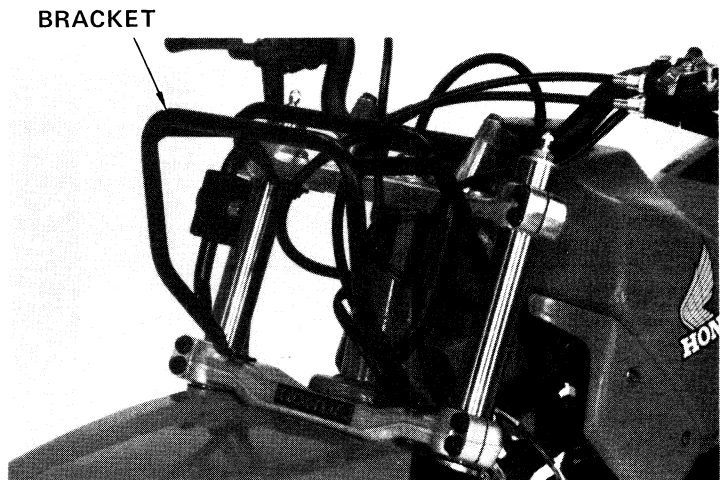

HEADLIGHT BRACKET REMOVAL/ INSTALLATION

Remove the four bolts attaching the headlight bracket mount holders to the fork bridge and remove the bracket.

Install the bracket in the reverse order of removal.




HANDLEBAR REMOVAL

Remove the two screws attaching the throttle lever housing and the housing.

INSTALLATION

Position the throttle lever housing on the handlebar and install it using the throttle lever housing holder and two screws.

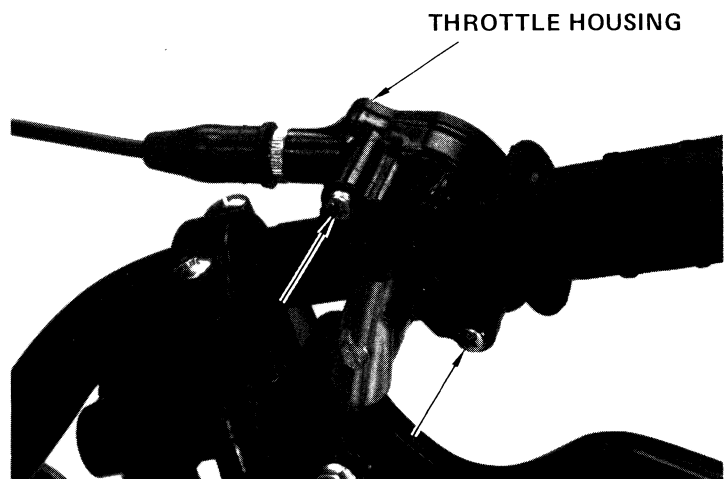

FRONT WHEEL

FRONT WHEEL REMOVAL

Raise the front wheel off the ground by placing a block or safety stand under the engine.

Remove the axle shaft holder nuts and holder.

Remove the four wheel hub nuts.

