




**DISASSEMBLY**


Hold the shock mount in a vise with soft jaws or a shop towel. Loosen the lock and adjusting nuts.

**NOTE:**

The pin spanners are optional tools.

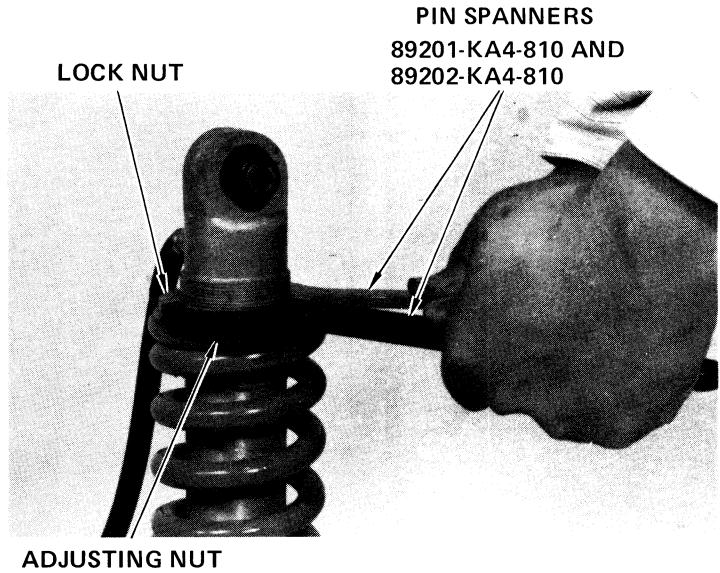

Remove the seat stopper, spring seat and spring.

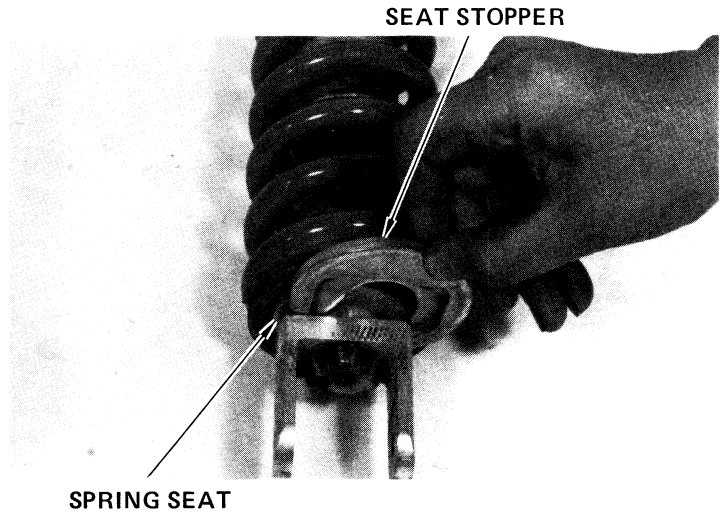

Measure the spring free length.

**SERVICE LIMIT: 209 mm (8.2 in)**

