

2. MAINTENANCE

MAINTENANCE SCHEDULE

- The maintenance intervals shown in the following schedule are based upon average riding conditions. Machines subjected to severe use, or ridden in unusually dusty areas, require more frequent servicing.

I: Inspect and Clean, Adjust, Lubricate or Replace, if necessary C: Clean R: Replace A: Adjust L: Lubricate			INITIAL SERVICE PERIOD (First week of operation)	REGULAR SERVICE PERIOD (Every 30 operating days)	Refer to page
	TRANSMISSION OIL	NOTE(1),(2)	R	R	2-3
	AIR CLEANER ELEMENT	NOTE(2)		C	18-8
	SPARK PLUG			I	2-5
*	CARBURETOR		I	I	2-8
	FUEL LINE		I: (EVERY YEAR)		2-8
*	FUEL STRAINER		C: (EVERY YEAR)		2-8
	THROTTLE OPERATION		I	I	2-7
	DRIVE CHAIN	NOTE(2)	I,L	I,L	18-9
*	BRAKE PADS	NOTE(3)	I: (EVERY YEAR)		2-12, 17-15
	CHAIN SLIDER		I	I	18-10
	FRONT FORK OIL/AIR		R: (EVERY YEAR)		2-15, 18-26
	FRONT/REAR BRAKE FLUID		I	I,R: (EVERY YEAR)	2-12, 17-14
*	SUSPENSION			I	2-15
	SWINGARM BEARINGS		I,L	I,L	18-40
	BRAKE SYSTEM		I	I	2-12, 17-8
*	CLUTCH		A	A	2-6
*	SPARK ARRESTER			C	14-2
	ALL NUTS, BOLTS, FASTENERS		I	I	---
	LIGHTING EQUIPMENT		I	I	2-16
	TIRES		I	I	2-14
*	STEERING HEAD BEARINGS		A: (EVERY YEAR)		18-29

NOTE: (1) Replace every 30 operating days or every 3 months, whichever comes first.
 (2) Service more frequently when riding in dusty areas, sand or snow.
 (3) Service more frequently after riding in very wet or muddy conditions.

AIR CLEANER

Remove the seat.

Remove the clips attaching the air cleaner cover and remove the cover.

