



FUEL SYSTEM

Remove the float pin.

Remove the float and float valve.

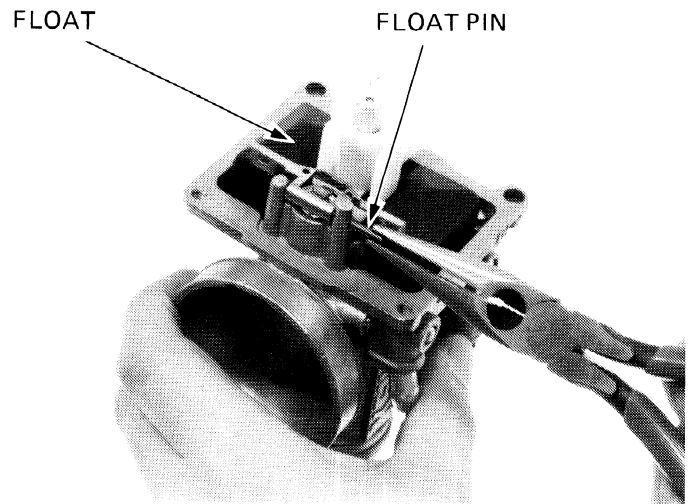

Check the valve and seat for wear or damage.
Replace the valve if it is worn or damaged.

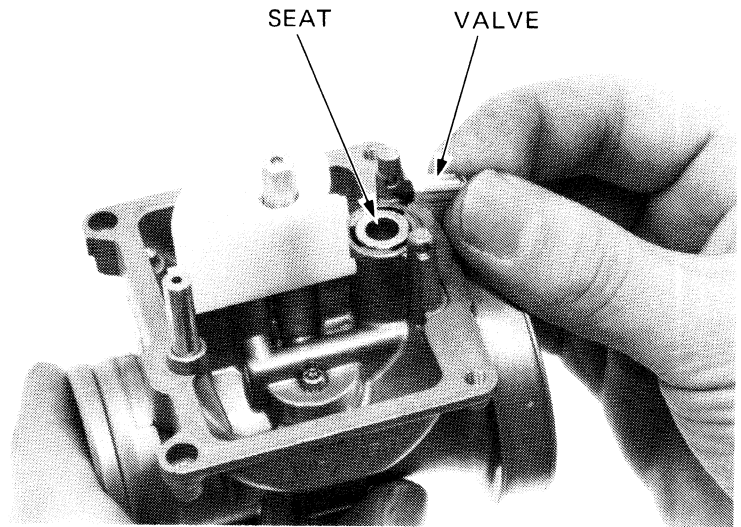

Remove the main jet, baffle plate, slow jet.
Check each part for wear or damage.
Remove the air screw.

NOTE

Before removing the air screw, record the number of rotations until it rests lightly, so it can be returned to its original positions.

CAUTION

Do not try to remove the jet block from the carburetor body.

