



Unscrew the lock nut and remove the choke/idle speed knob.

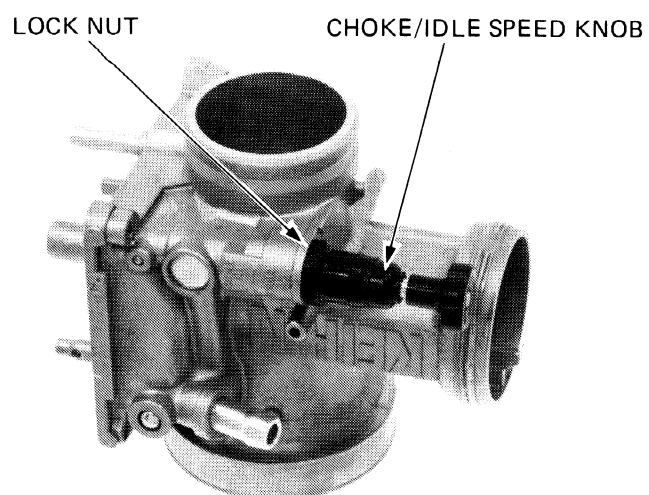

Check the valve and for wear or damage.

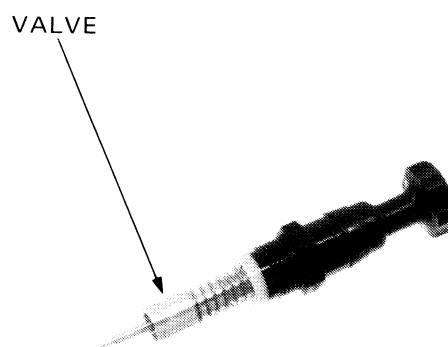

Blow open all jets and body openings with compressed air.

