



FRONT FORK

REMOVAL

Remove the front wheel (Page 10-6).
Remove the headlight case retaining bands.
Loosen the fork pinch bolts.

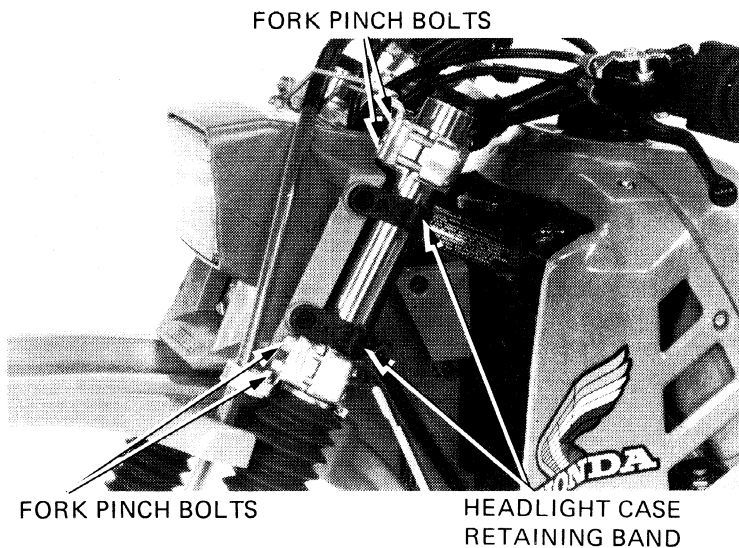

Loosen the fork boot band and slide the boot down.
Pull the fork tube out of the bridge and steering stem.

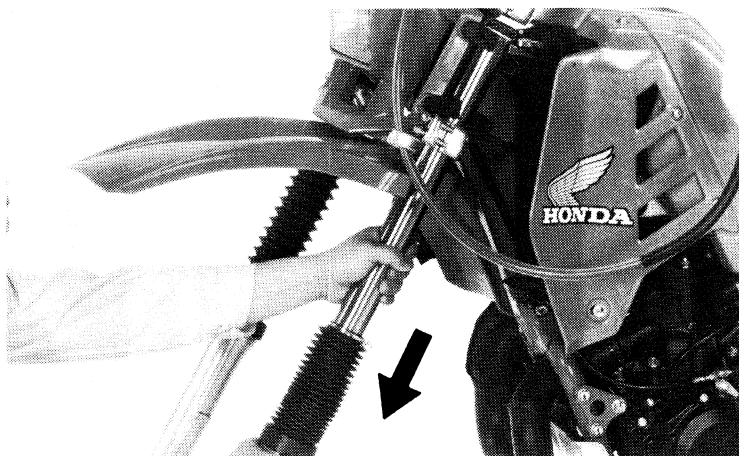

DISASSEMBLY

Release air pressure.
Remove the fork boot.
Hold the fork tube in a vise with soft jaws or a shop towel and remove the fork tube cap.

CAUTION

Do not damage the fork tube sliding surface.

WARNING

The fork cap is under spring pressure. Use care when removing the cap to keep it from causing injury.

