

## FRONT WHEEL/SUSPENSION/STEERING

Install the adjustment nut with the stepped side facing down.

Tighten the adjustment nut to the first specified torque.

**TORQUE:** 35–45 N·m  
(3.5–4.5 kg·m, 25–33 ft·lb)


Turn the steering stem all the way to the right and left five times to seat the bearings loosen the adjustment nut and retighten it to the second specified torque.

**TORQUE:** 36–38 N·m  
(3.6–3.8 kg·m, 26–28 ft·lb)



STEERING STEM SOCKET  
07916–3710100

Install the washer and dust seal.

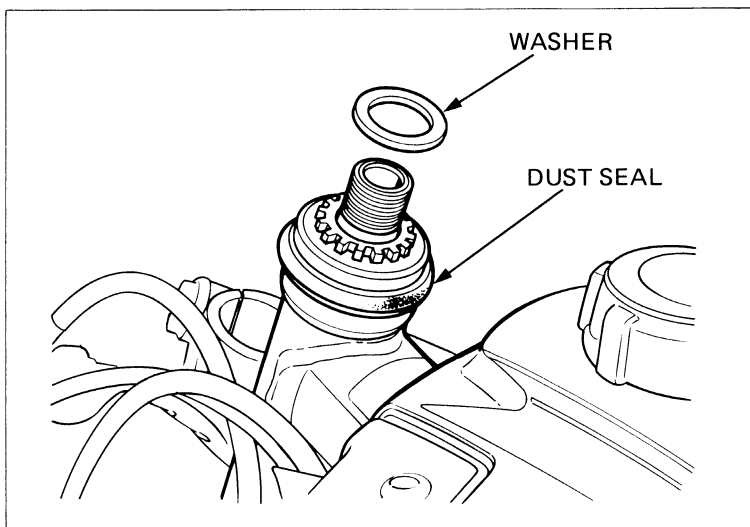

EXTENSION BAR OR EQUIVALENT  
AVAILABLE IN U.S.A.  
07716–0020500

Install the fork bridge, stem nut washer and stem nut.

Temporarily install the front forks.


Tighten the steering stem nut.

**TORQUE:** 80–120 N·m  
(8.0–12.0 kg·m, 58–88 ft·lb)

Install the front forks (Page 10-21).

Install the following parts:

- Front fender.
- Front wheel (Page 10-13).
- Handlebar (Page 10-4).
- Headlight case.

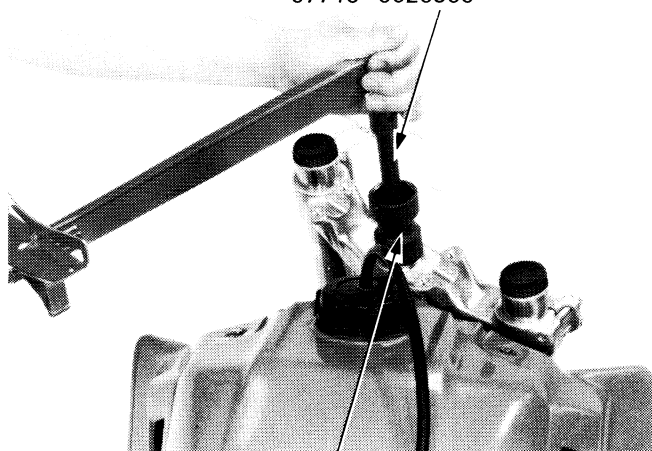

LOCK NUT WRENCH, 30 x 32 mm  
OR EQUIVALENT AVAILABLE IN U.S.A. 07716–0020400