



REAR SUSPENSION

Install the spring, spring seat and spring seat stopper.

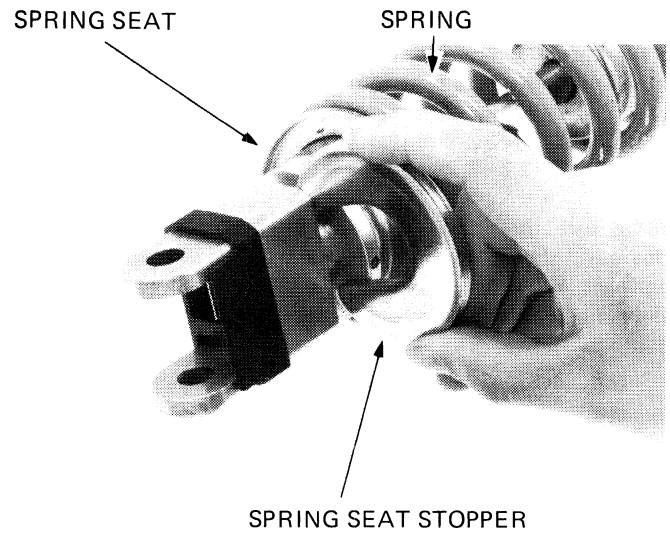

Align the shock mounts so that the oil hose bolt faces the rear and the damping adjuster on the lower mount faces the left.

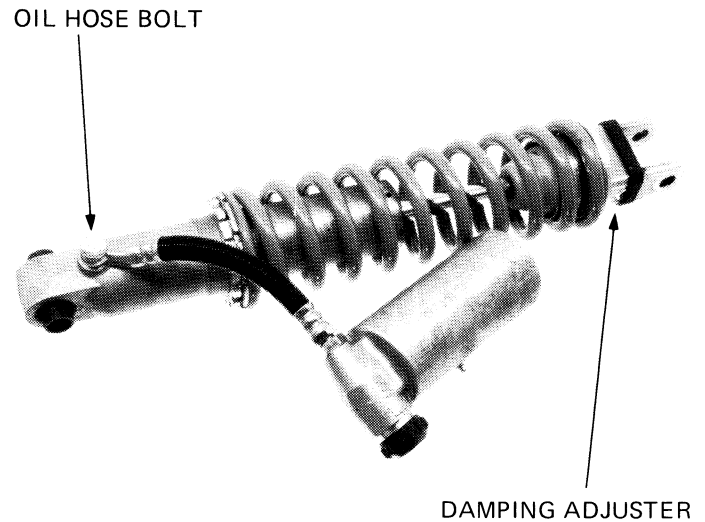

Turn the adjusting nut to obtain the correct spring length.

Measure the spring length.

STANDARD SPRING LENGTH: 241.7 mm (9.52 in)

NOTE

One turn of the adjusting nut changes the spring length by 1.5 mm (0.06 in).

Use this standard spring preload length as a baseline. See the Owner's Manual for detailed instructions on adjusting preload for rider weight and setting damping for riding conditions and rider skill.

