

## HYDRAULIC DISC BRAKES

---

### REMOVAL/INSTALLATION


#### ● FRONT BRAKE DISC

Remove the front wheel (Page 10-6).  
Remove the front brake disc from the front wheel hub.

Install the front brake disc and tighten the mount nuts.

**TORQUE: 25–30 N·m**  
(2.5–3.0 kg·m, 18–22 ft·lb)

Install the front wheel (Page 10-13).

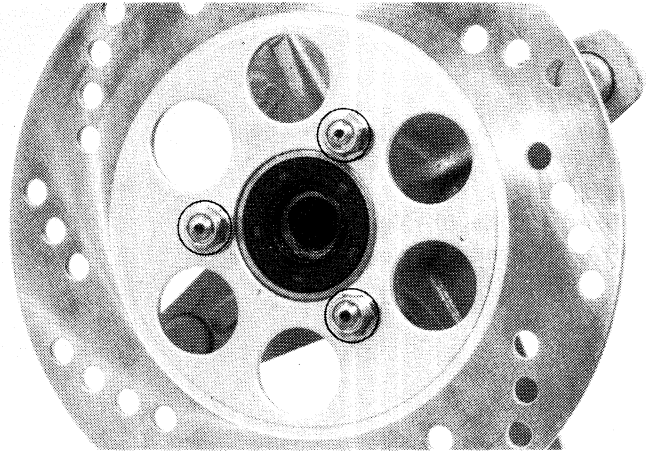


#### ● REAR BRAKE DISC

Remove the rear axle (Page 11-3).  
Remove the rear brake disc from the disc hub.  
Install the rear brake disc and tighten the mounting bolts.

**TORQUE: 35–40 N·m**  
(3.5–4.0 kg·m, 25–29 ft·lb)

Install the rear axle (Page 11-7).

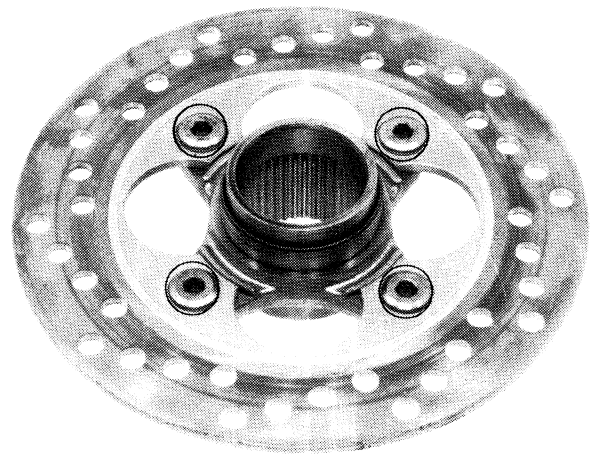

## FRONT CALIPER

### REMOVAL

Drain the brake fluid from the front hydraulic system.  
Remove the front brake hose clamp from the front fork leg.  
Remove the oil bolt and front brake hose from the caliper (Page 13-6).

#### CAUTION

*Avoid spilling fluid on painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.*

