


ELECTRICAL SYSTEM

CDI UNIT

Remove the fuel tank (Page 3-3).
 Disconnect the CDI unit wire coupler.
 Remove the CDI unit.

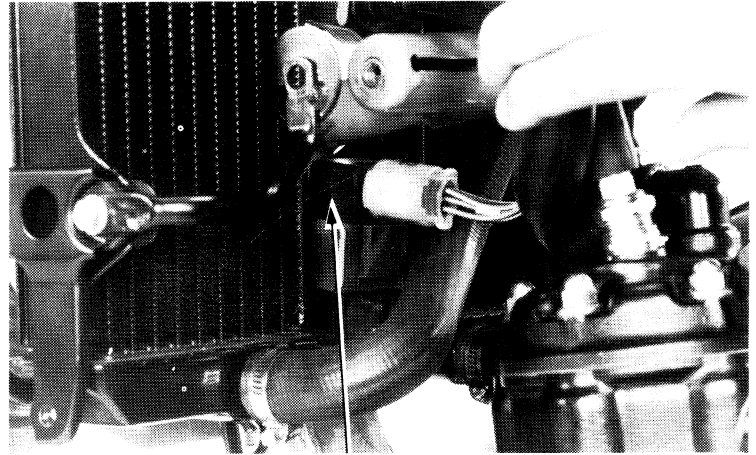


CDI UNIT

Measure the resistance between the terminals.
 Replace the CDI unit if the readings are not within
 the specifications in the table below.

NOTE

- The CDI unit is fully transistorized.
- For accurate testing, it is necessary to use a specified electric tester. Use of an improper tester may give a false reading.
- Use Sanwa Electric Tester (07308-0020000) or Kowa Tester (TH-5H-1) or Kowa Digital Multi-Tester (07411-0020000 or KS-AHM-32-003: U.S.A. only).

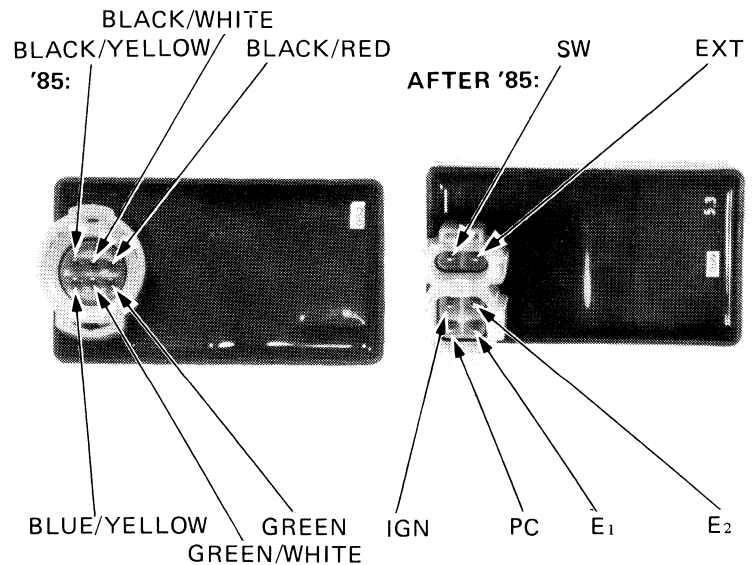

'85:

Unit: kΩ

(-)	(+)	BLACK/WHITE	GREEN	BLACK/RED	GREEN/WHITE	BLUE/YELLOW	BLACK/YELLOW
BLACK/WHITE			∞	∞	∞	∞	∞
GREEN		2-200		0.2-20	0	10-100	∞
BLACK/RED		0.2-20	∞		∞	∞	∞
GREEN/WHITE		2-200	0	0.2-20		10-100	∞
BLUE/YELLOW		50-1000	10-100	20-200	10-100		∞
BLACK/YELLOW		∞	∞	∞	∞	∞	