

HOW TO USE THIS MANUAL

Sections 1 through 3 apply to the whole ATC; while sections 4 through 18 describe parts of the ATC, grouped according to location.

Find the section you want on this page, then turn to the table of contents on page 1 of that section.

Most sections start with an assembly or system illustration and all the required specifications, torque values, general instructions, tools and troubleshooting for the section. The subsequent pages give detailed procedures.

If you don't know the source of the trouble, see Section 19, TROUBLESHOOTING.

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. HONDA MOTOR CO., LTD. RESERVES THE RIGHT TO MAKE CHANGES AT ANY TIME WITHOUT NOTICE AND WITHOUT INCURRING ANY OBLIGATION WHATSOEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION.

HONDA MOTOR CO., LTD.
Service Publications Office

CONTENTS

	GENERAL INFORMATION	1
	LUBRICATION	2
	MAINTENANCE	3
ENGINE	FUEL SYSTEM	4
	ENGINE REMOVAL/INSTALLATION	5
	CYLINDER HEAD/VALVES	6
	CYLINDER/PISTON	7
	CLUTCH/OIL PUMP/KICK STARTER	8
	ALTERNATOR/STARTER CLUTCH/ GEARSHIFT LINKAGE	9
	CRANKCASE/CRANKSHAFT/ TRANSMISSION	10
CHASSIS	FRONT WHEEL/BRAKE/SUSPENSION/ STEERING	11
	REAR WHEEL/BRAKE/SUSPENSION/ FINAL DRIVE	12
	FRONT FENDER/SEAT/REAR FENDER/ EXHAUST MUFFLER	13
ELECTRICAL	IGNITION SYSTEM	14
	BATTERY/CHARGING SYSTEM	15
	STARTER SYSTEM	16
	LIGHTS/SWITCHES	17
	WIRING DIAGRAM	18
	TROUBLESHOOTING	19