

FINAL DRIVE OIL

CHECK

Make sure the ATC is on level ground.

Remove the oil filler cap.

Check that the oil level reaches the lower edge of the oil filler cap hole.

Check for leaks, if the level is low. Pour fresh oil through the oil filler hole until it reaches the lower edge.

CHANGE

Change the oil with the final drive warm and the ATC on level ground to assure rapid and complete draining.

Remove the oil filler cap.


Remove the drain bolt to drain all oil from the final gear case.

Install the drain bolt securely.

Fill the gear case with the recommended oil up to the correct level.

OIL CAPACITY: 100 cc (3.4 US oz)

RECOMMENDED OIL: Hypoid gear oil SAE #80

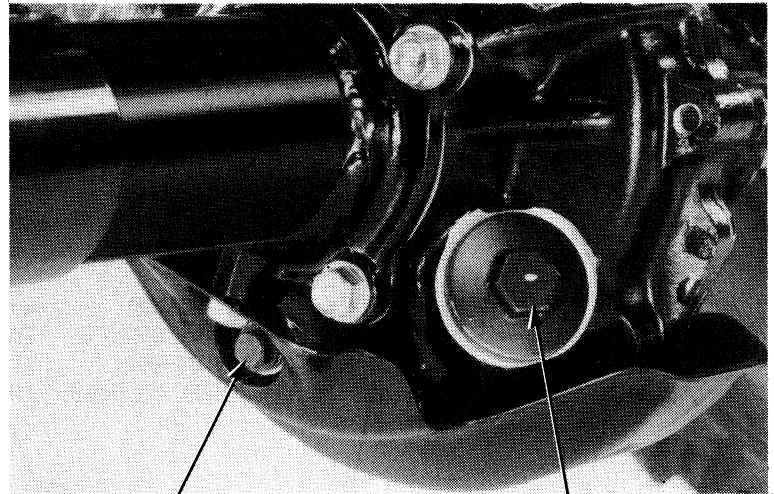

DRAIN PLUG

OIL FILLER CAP



OIL LEVEL