


## FUEL LINE

Check the fuel line.

Replace the fuel line if it shows signs of deterioration, damage or leaks.

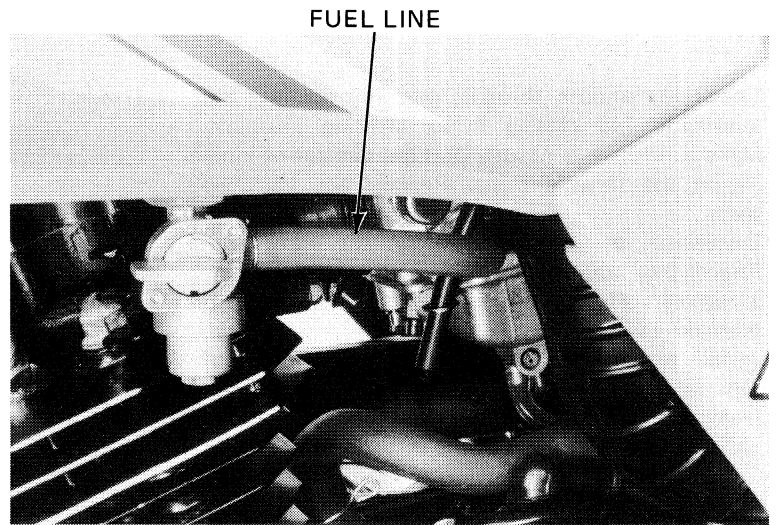

## FUEL STRAINER

Turn the fuel valve OFF.

Remove the fuel cup, O-ring and filter screen, and drain the gasoline into a suitable container.

### ⚠ WARNING

*Gasoline is flammable and is explosive under certain conditions. Do not smoke or allow flames or sparks near the equipment while draining fuel.*

Wash the cup and filter screen in clean non-flammable or high flash point solvent.

Reinstall the screen, aligning the index marks on the fuel valve body and filter screen.

Install a new O-ring into the fuel valve body.

Reinstall the fuel cup, making sure the new O-ring is in place.

Hand tighten the fuel cup and then torque it to specification.

**TORQUE: 3–5 N·m (0.3–0.5 kg·m, 2–4 ft·lb)**

### CAUTION

*Do not overtighten the fuel cup.*

After installing, turn the fuel valve ON and check that there are no fuel leaks.

