

## MAINTENANCE

### REAR BRAKE

Check the cable, brake lever and brake pedal for loose connections, excessive play, or other damage.

Replace or repair if necessary.

Disconnect the brake cables at the brake lever or pedal ends.

Thoroughly lubricate the cables and their pivot points with a commercially available cable lubricant to prevent premature wear.

Install the cables.

Measure the rear brake lever (parking brake) free play at the end of the brake lever.

#### REAR BRAKE LEVER FREE PLAY:

15–20 mm (5/8–3/4 in)



Minor adjustment can be made with the upper adjuster. Slide the rubber cover off the adjuster, loosen the lock nut and adjust.

Major adjustment should be made with the lower adjusting nut at the rear brake arm.

Measure the brake pedal free play at the end of the brake pedal and adjust as above.

#### BRAKE PEDAL FREE PLAY:

15–20 mm (5/8–3/4 in)

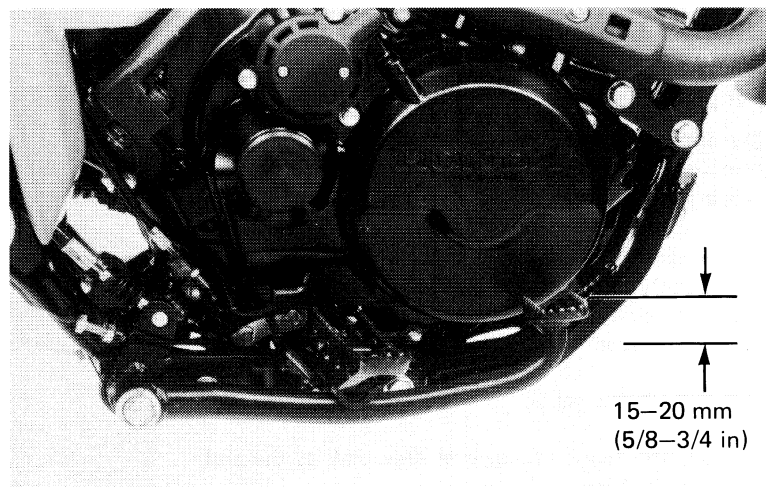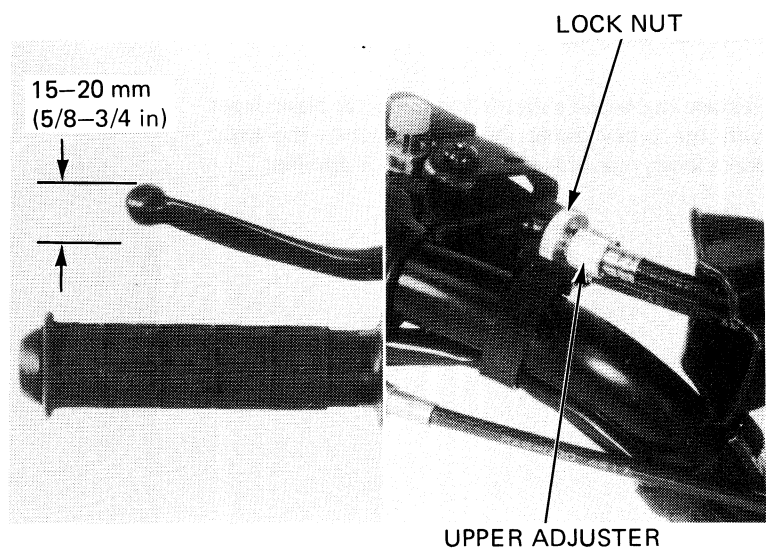

#### NOTE

Make sure the cut-out of each adjusting nut is seated on the brake arm pin.

