

## FUEL TANK

Remove the seat.  
 Turn the fuel valve OFF and disconnect the fuel line at the fuel valve.  
 Remove the fuel tank mounting bolt and the tank.

**WARNING**

*Keep gasoline away from flames or sparks.  
 Wipe up spilled gasoline at once.*

Use a drain pan and check that fuel flows freely out of the fuel valve by turning the fuel valve ON. If flow is restricted, clean the fuel strainer (Page 3-6) and fuel filter screen.  
 Check the vent hole in the filler cap for blockage. Install the fuel tank aligning its front brackets onto the rubber cushions on the frame and tighten the mounting bolt.  
 Connect the fuel line to the fuel valve.  
 Install the seat.  
 Turn the fuel valve ON and make sure that there are no fuel leaks.

