


FUEL SYSTEM

AIR CLEANER CASE


Remove the seat.
Loosen the air cleaner-to-frame connecting tube band.

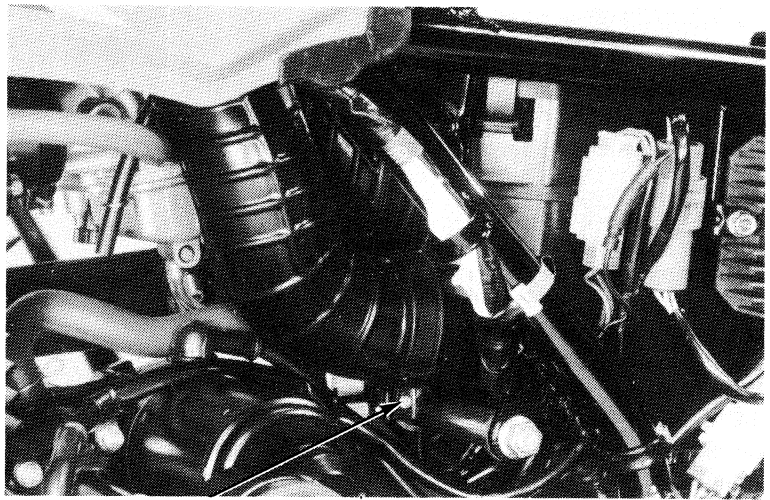

AIR CLEANER-TO-FRAME
CONNECTING TUBE BAND

AIR CLEANER-TO-CARBURETOR
CONNECTING TUBE BAND

Loosen the air cleaner-to-carburetor connecting tube band.
Remove the two air cleaner case mounting bolts and the air cleaner case.

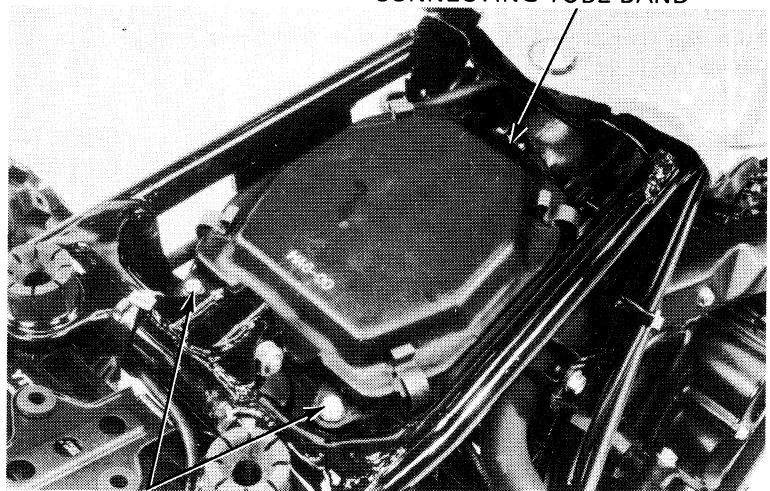

CASE MOUNTING BOLTS

