

FUEL SYSTEM

FLOAT LEVEL


Measure the float level with a float level gauge as shown.

SPECIFICATIONS: 18.5 mm (0.73 in)

Replace the float if it is out of specification.

NOTE:


Floats are plastic and can't be adjusted.

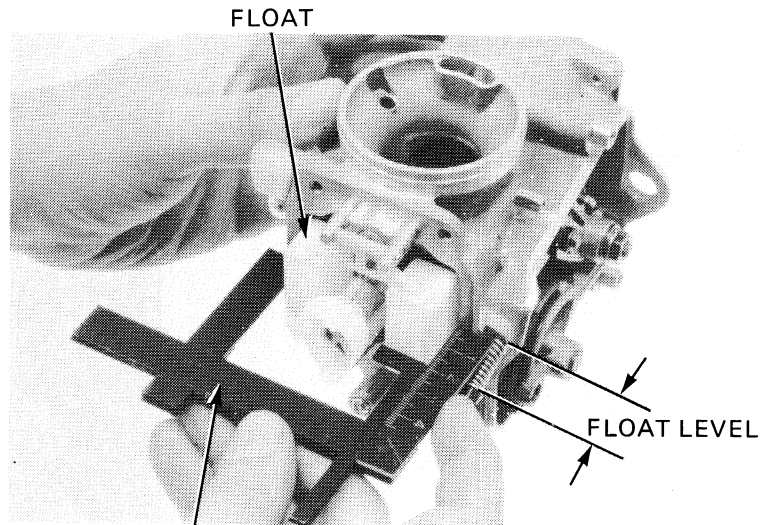

FLOAT LEVEL GAUGE
07401-0010000

FLOAT AND JETS

Remove the float pin, baffle, float and float valve.

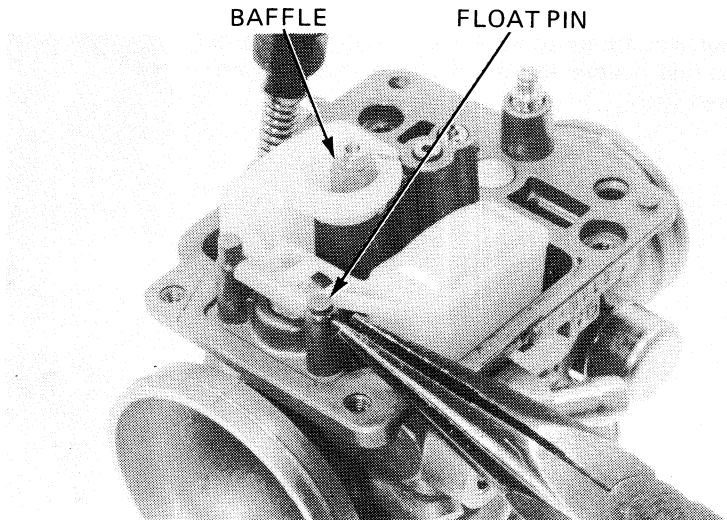

Inspect the float valve for grooves and nicks.
Replace as required.

Inspect the operation of the float valve.

