



FUEL SYSTEM

Remove the needle jet by pressing it out from the cylinder side carefully.

Inspect the screw and each jet and replace them if they are worn or damaged.

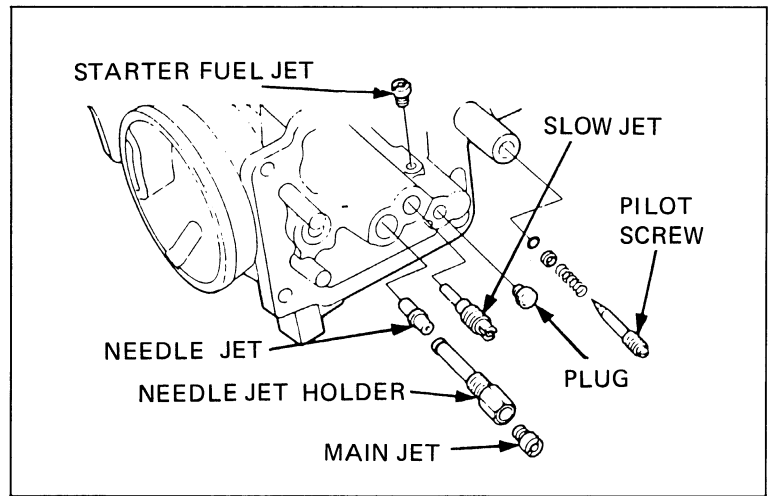

Remove the piston throttle valve (Page 4-11) and blow open all carburetor body openings with compressed air.

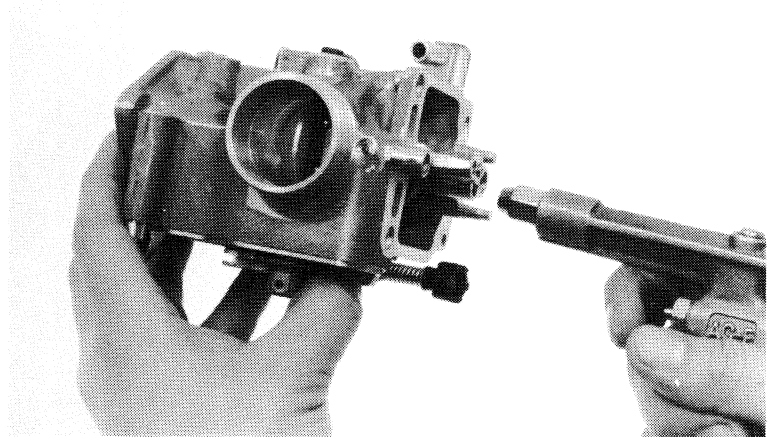

ASSEMBLY

Float chamber assembly is essentially the reverse order of disassembly.

NOTE

- Use new O-rings whenever the carburetor is reassembled.
- Handle all jets with care. They can easily be scored or scratched.
- Set the pilot screw to the position recorded during disassembly.
- Align the overflow tube on the chamber with the hole in the baffle as shown.

