

THROTTLE VALVE


NOTE

The butterfly throttle valve attaching screws are staked and the valve can be not be removed.


PISTON THROTTLE VALVE REMOVAL

Remove the throttle valve arm set screw.

PISTON THROTTLE VALVE VALVE ARM VALVE SHAFT

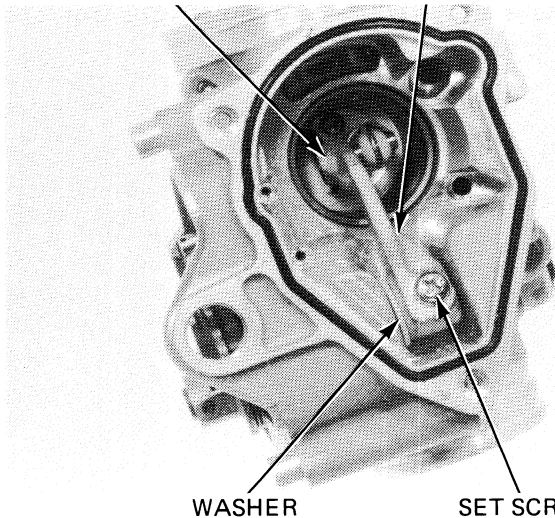

Pull the shaft out and remove the throttle valve and washer.

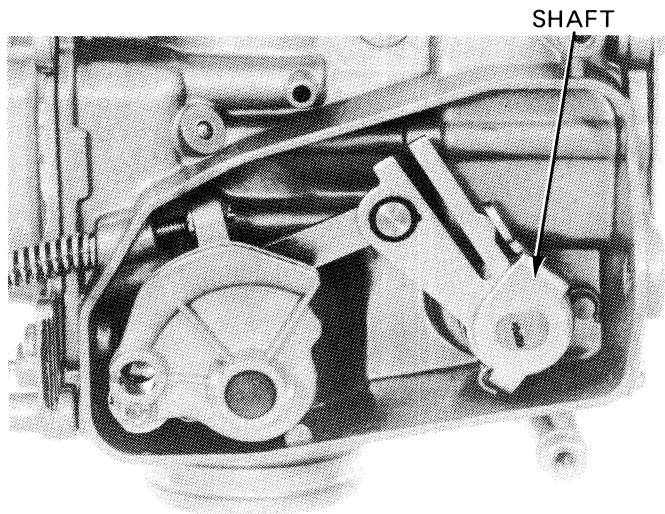

Remove the two screws and remove the valve and jet needle from the arm.

