



Check the tensioner lifter for wear or damage and replace if necessary.

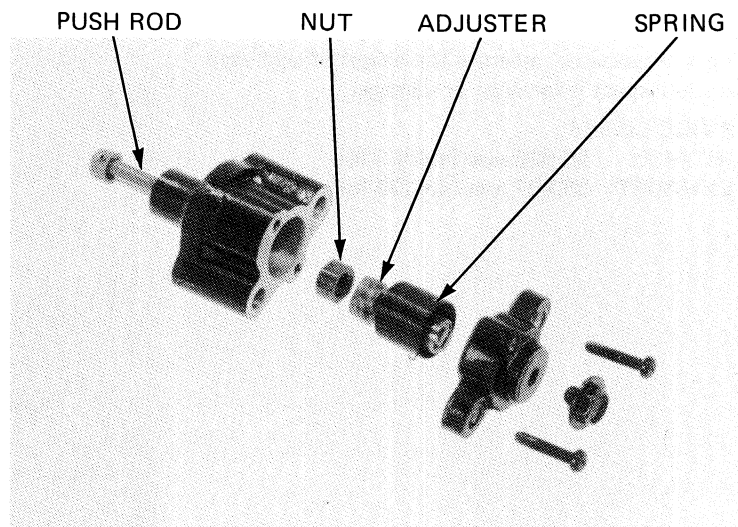

## CAMSHAFT REMOVAL

Remove the timing and flywheel bolt hole caps.

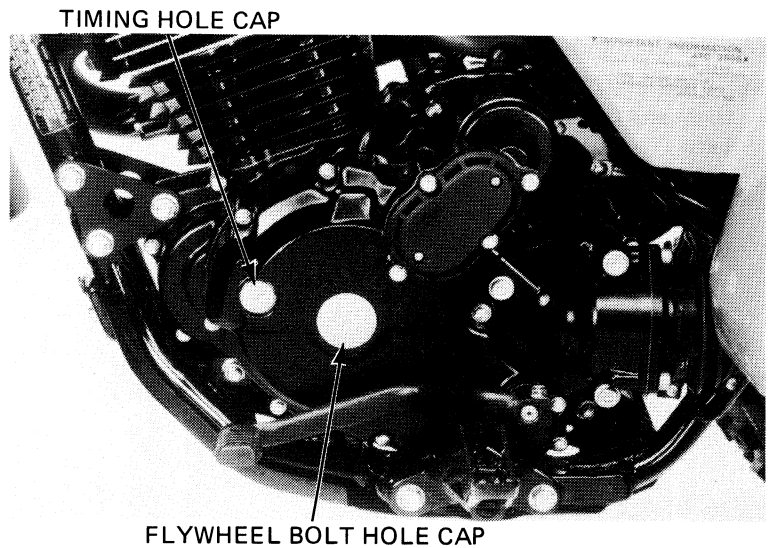

Turn the flywheel clockwise and remove the cam sprocket bolts and the sprocket.  
Remove the camshaft.  
Suspend the cam chain with a piece of wire to prevent it from falling into the crankcase.  
Remove the camshaft end cap.

