


CAM CHAIN GUIDE

REMOVAL


Remove the cylinder head (Page 6-7).

Remove the tensioner lifter (Page 6-4) and tensioner guide.

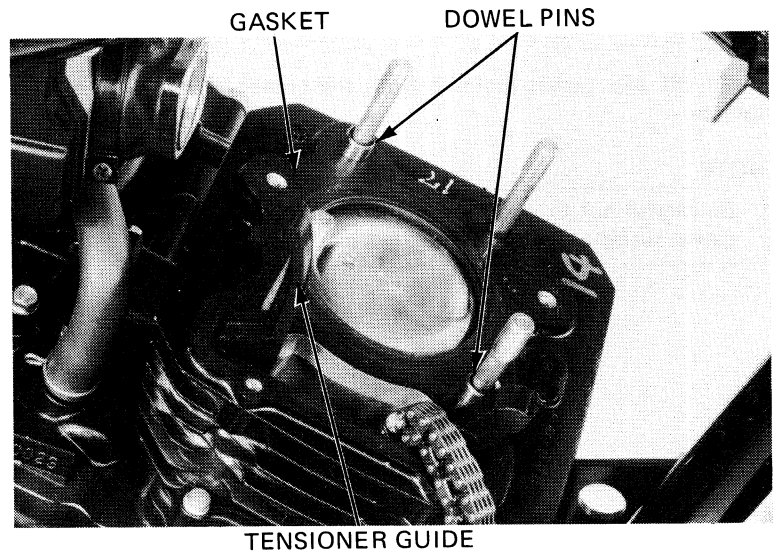

Remove the right crankcase cover (Page 8-3), centrifugal clutch (Page 8-10) and separator plate.

Remove the tensioner bolt and tensioner washer.

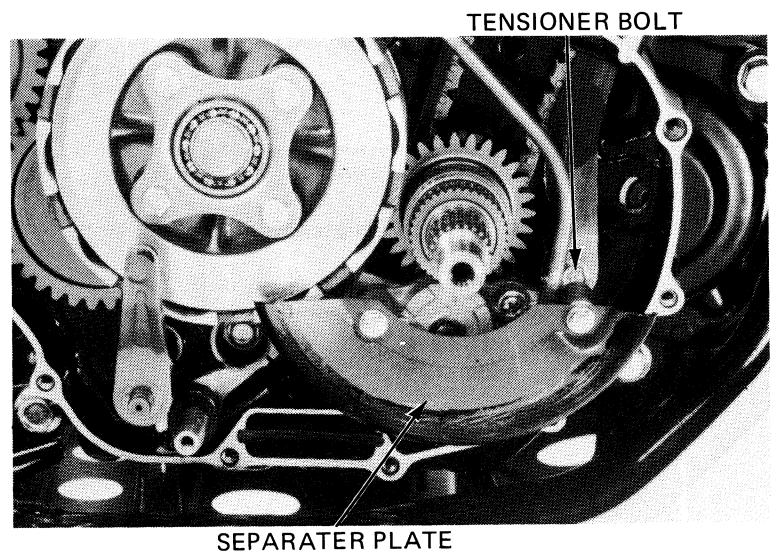

INSPECTION

Inspect the cam chain guide and tensioner for wear or damage.

Inspect the tensioner lifter for good tension, replace if necessary (Page 6-18).

