


CLUTCH/OIL PUMP/KICK STARTER

Align the index mark on the case with the punch mark on the clutch lever and install the clutch lever.

Install the thrust washer.

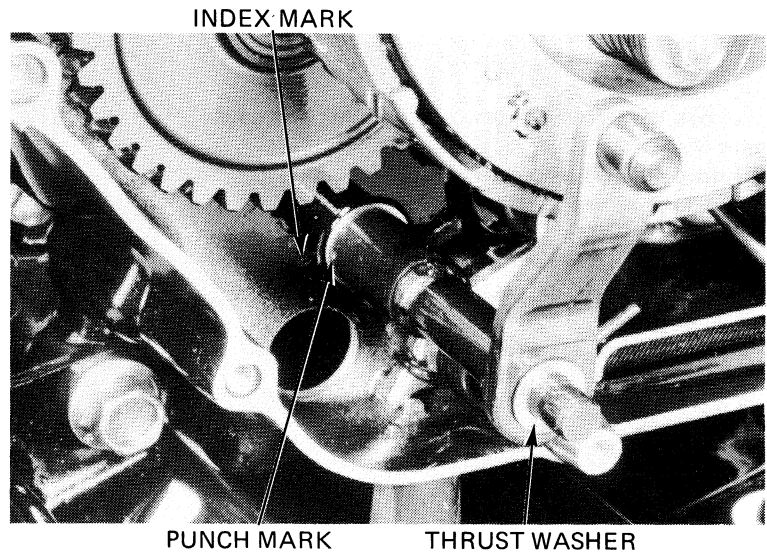


CENTRIFUGAL CLUTCH

REMOVAL

Remove the right crankcase cover (Page 9-12). Hold the centrifugal clutch weight assembly with a clutch holder and remove the lock nut by turning it clockwise.

NOTE

The lock nut has left hand thread.

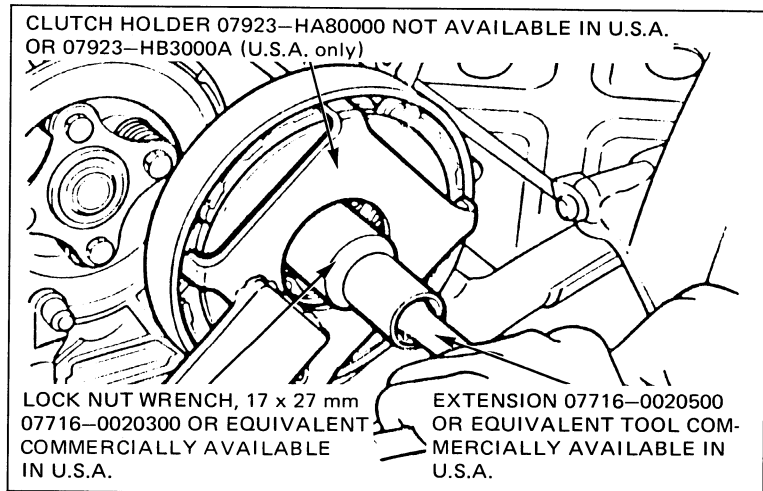

Remove the centrifugal clutch weight assembly and drum with a clamping two jaw puller or clutch puller 07933-HA80000 (Not available in U.S.A.)

