



## CLUTCH/OIL PUMP/KICK STARTER

---

Assemble the ratchet spring, spring retainer, return spring, collar and washer.

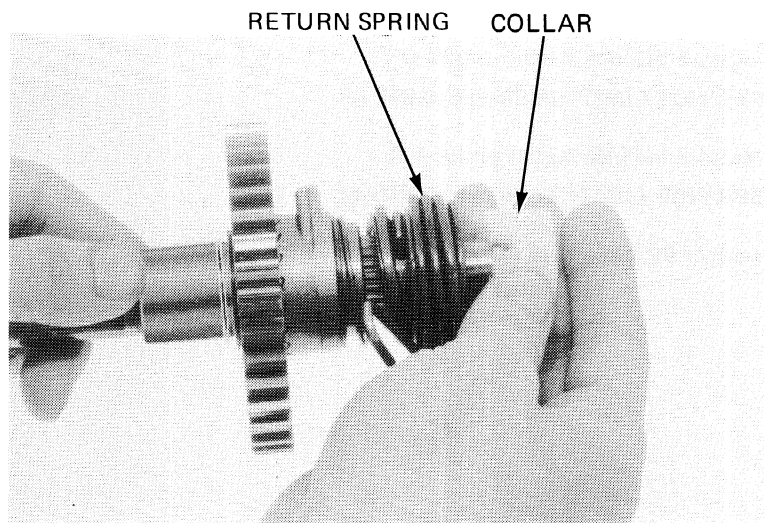

Hook the return spring onto the crankcase.

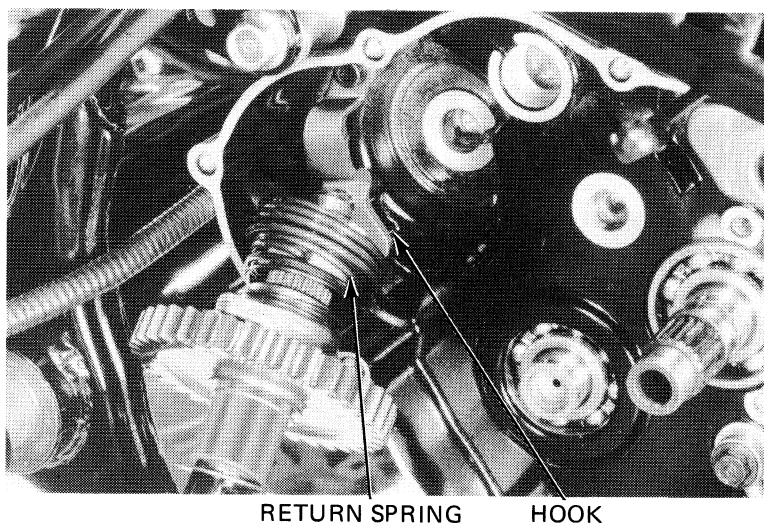

Install the kick starter assembly by turning it clockwise.

### NOTE

The punch mark on the spindle should face up.

Install the washer onto the kick starter spindle. Install the remaining parts in the order of removal.

