



ALTERNATOR/STATER CLUTCH/GEARSHIFT LINKAGE

Remove the needle bearing and washer.

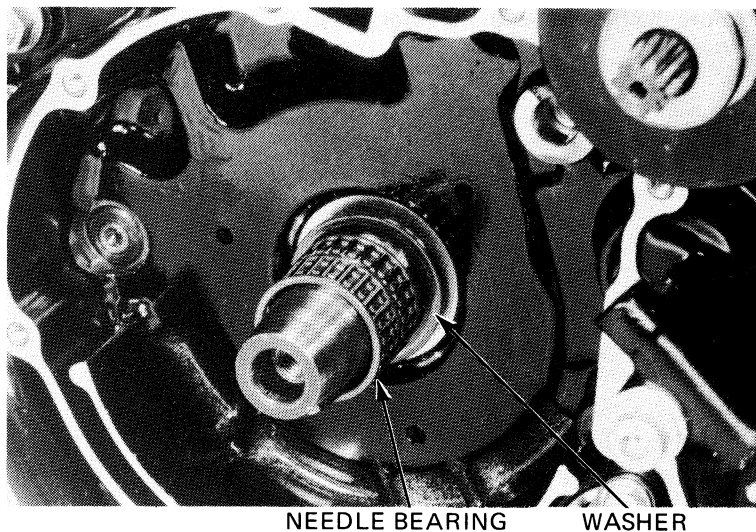

Remove the one-way clutch from the flywheel using a shock driver and Torx bit.

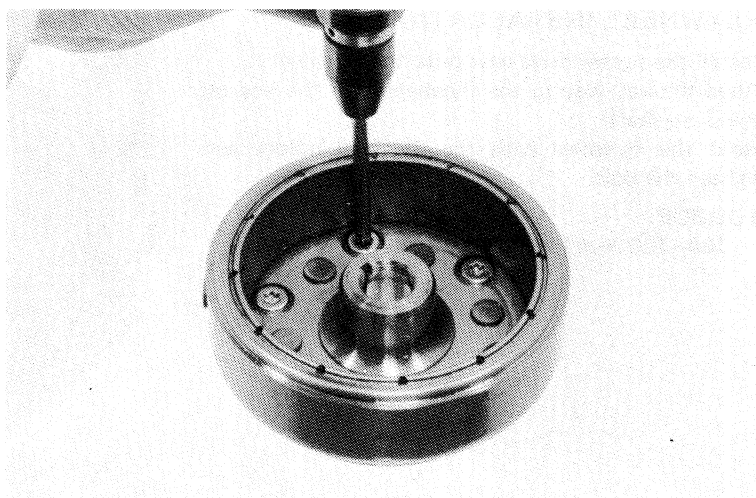

INSPECTION

Inspect the starter driven gear teeth for excessive or abnormal wear.

Check the needle bearing for damage or excessive play.

