


Check the rollers of the one-way clutch for wear or damage.

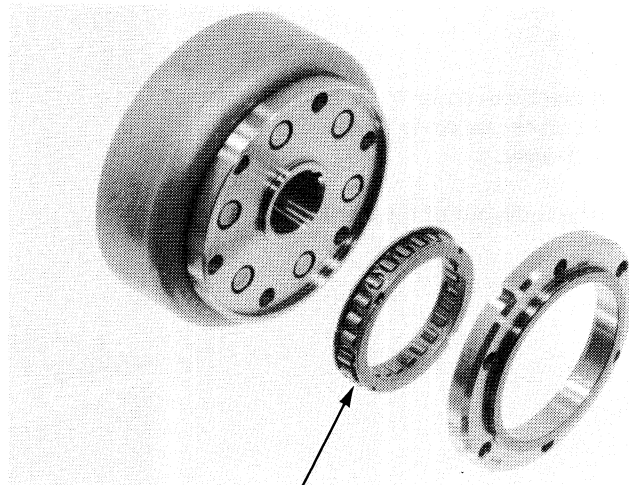


ONE-WAY STARTER CLUTCH

INSTALLATION

Install the one-way clutch onto the flywheel and tighten the Torx bolts.

TORQUE: 18–25 N·m (1.8–2.5 kg·m, 13–58 ft·lb)

Refer to flywheel installation (Page 9-6).

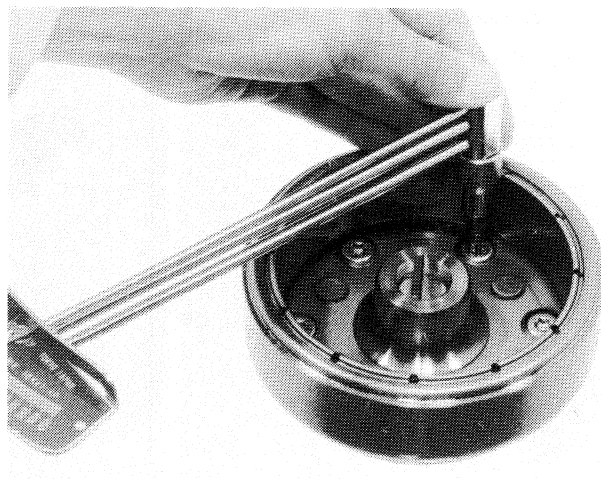

Install the starter driven gear by turning it clockwise.

Check for smooth operation of the driven gear and one-way clutch. You should be able to turn the gear clockwise, but not counter-clockwise.

