



CRANKCASE/CRANKSHAFT/TRANSMISSION

Install the balancer into the left crankcase aligning its timing mark with the timing mark on the crankshaft gear.

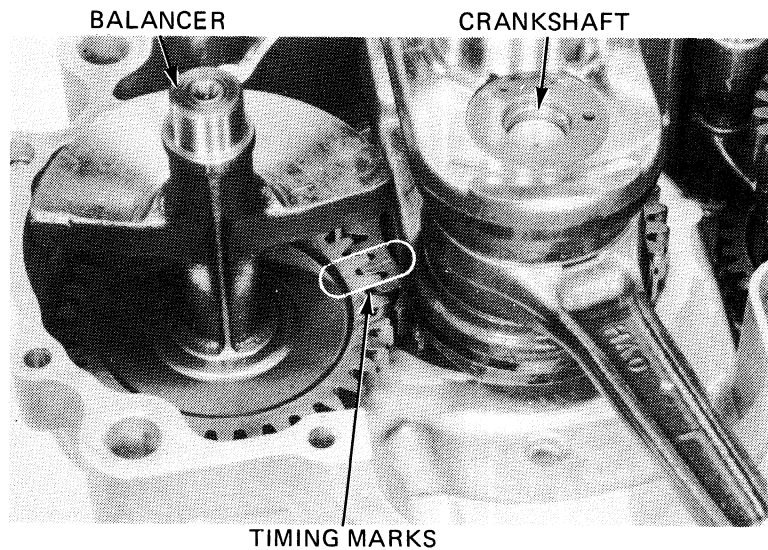

Install the crankshaft onto the left crankcase using the special tool.

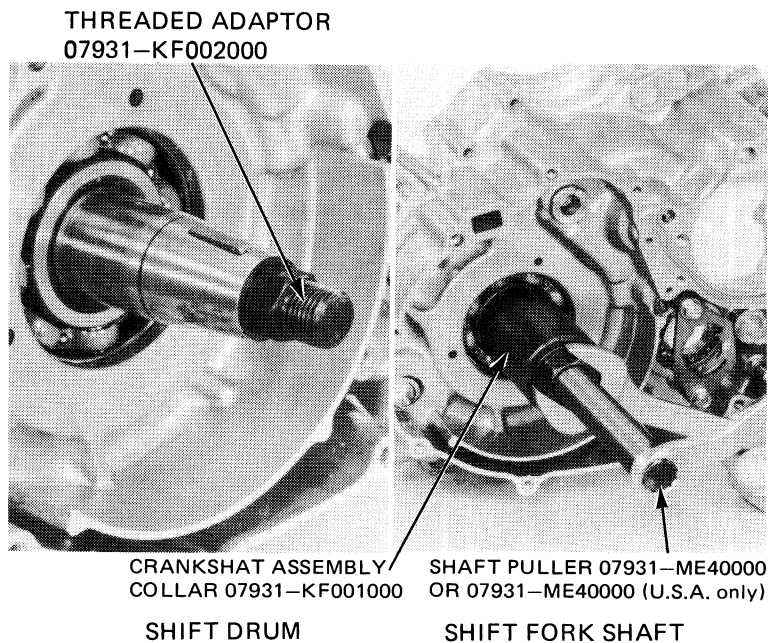

TRANSMISSION

DISASSEMBLY

NOTE

Temporarily install the gearshift drum bearing stopper plates, dowel pins, collars and shifter plate (Page 9-10) to prevent the bearing frame falling out while disassembling and assembling the transmission.

Pull the shift fork shaft out and remove the shift forks and shift drum.

