



CRANKCASE/CRANKSHAFT/TRANSMISSION

Remove the spline collar and C4 gear from the countershaft and remove the mainshaft.

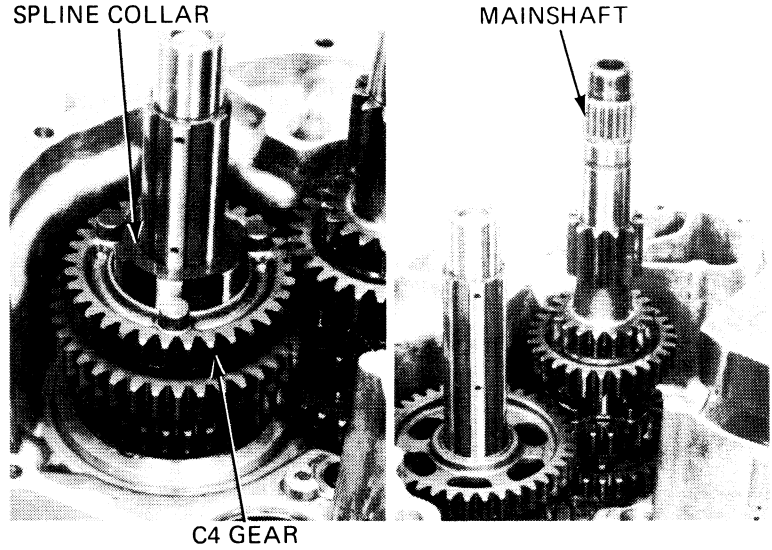


Remove the snap ring, spline washer, M4 gear and M4 gear bushing from the mainshaft.

Remove the M3 gear, M5 gear bushing, M5 gear and thrust washer from the left crankcase.

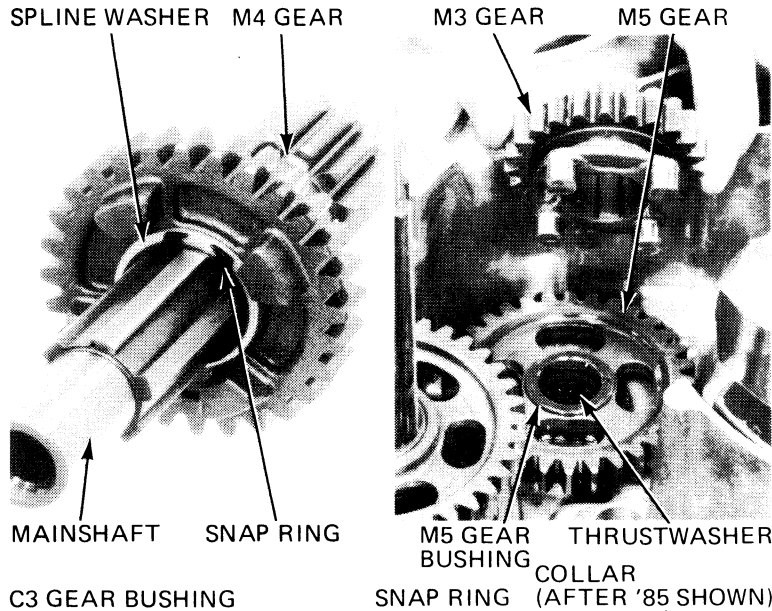

Remove the C3 gear and bushing from the countershaft.

'85:
Remove the snap rings, collars and C5 gear.
After '85:
Remove the collar and C5 gear.

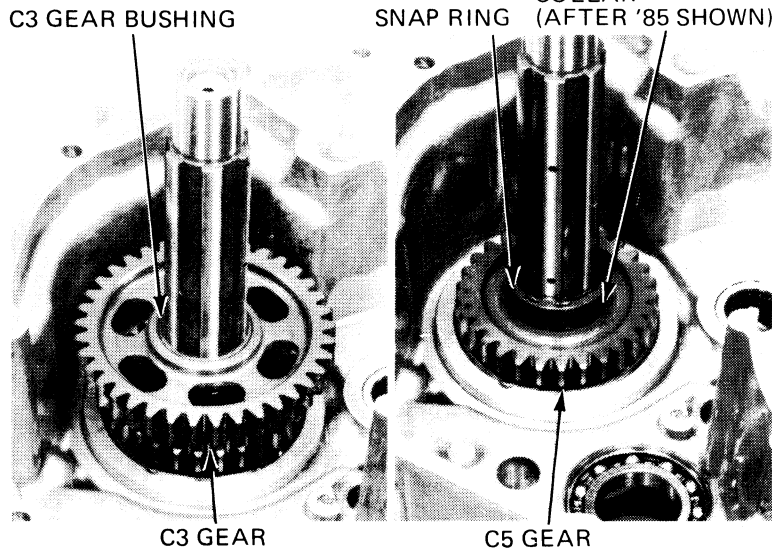

NEW