

# CRANKCASE/CRANKSHAFT/TRANSMISSION

Assemble the mainshaft, countershaft and reverse idler the reverse order of disassembly.

