


Pack all front wheel bearing cavities with grease.

Drive in the left bearing squarely until it seats.
Install the center collar.


NOTE

Do not allow the bearings to tilt while driving them in.

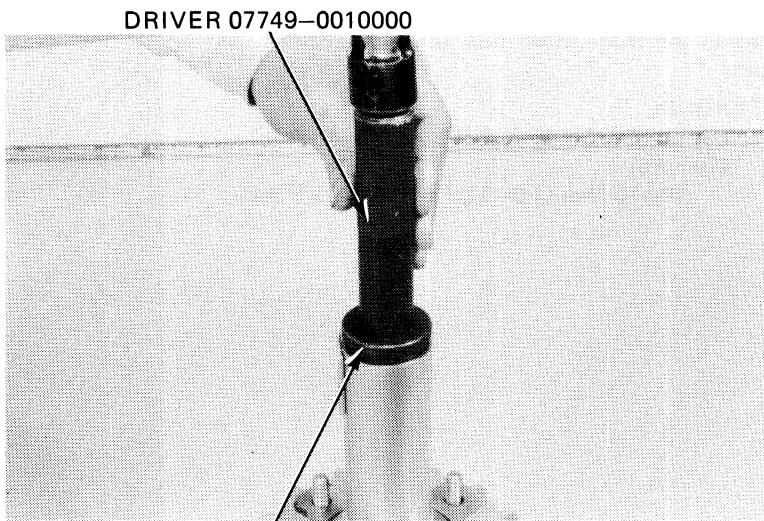


DRIVER 07749-0010000
ATTACHMENT, 42 x 47 mm 07746-0010300
PILOT, 15 mm 07746-0040300

Apply grease to the inside of the dust seals and drive them into the wheel hub.

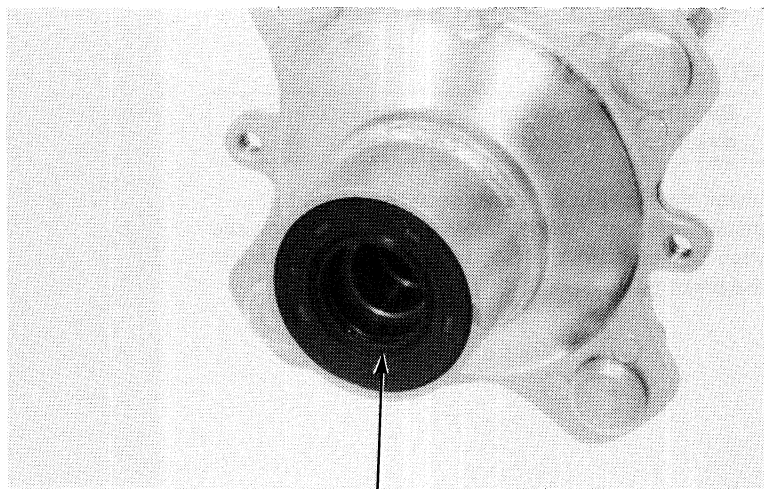

DUST SEAL

Install the brake drum onto the wheel hub and tighten it with the two screws.

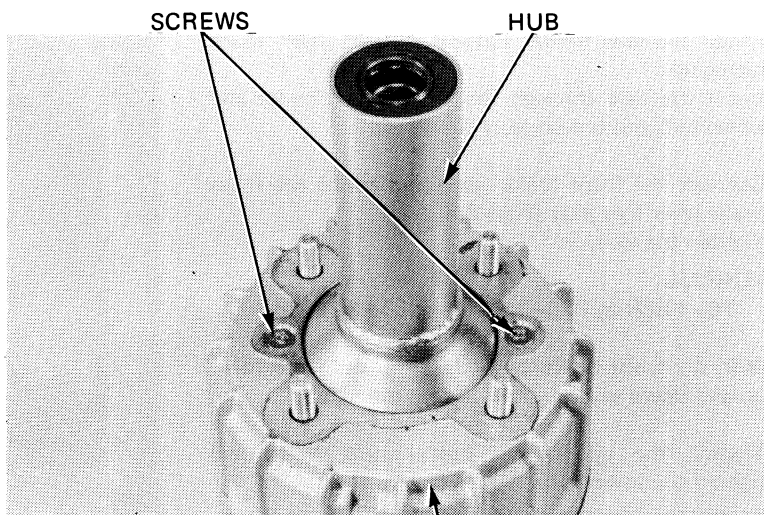

SCREWS
HUB
BRAKE DRUM