


**FRONT FORK**


**REMOVAL**

Remove the front wheel (Page 11-7).  
Remove the two bolts attaching the front brake cable holder to the left fork leg.

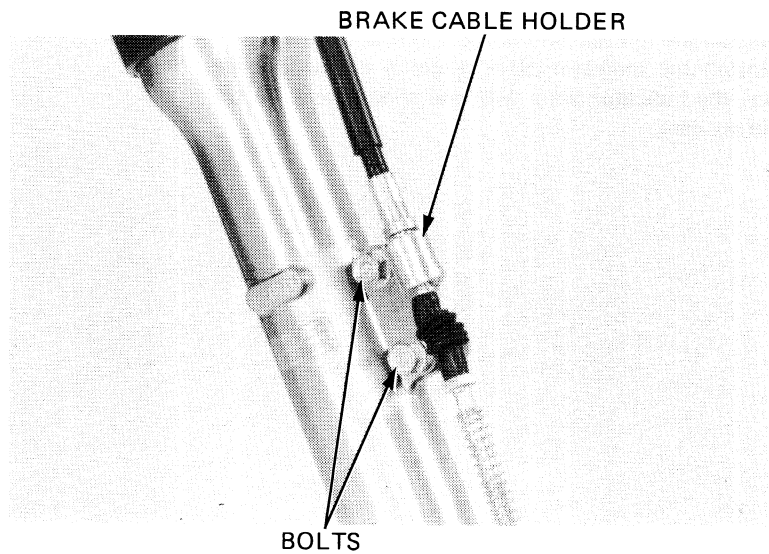

Remove the headlight bands from the front fork.  
Loosen the fork upper and lower pinch bolts.

Remove the fork top rings.  
Loosen the fork boot bands and slide boots down.  
Remove the front forks from the fork top and bottom bridges.

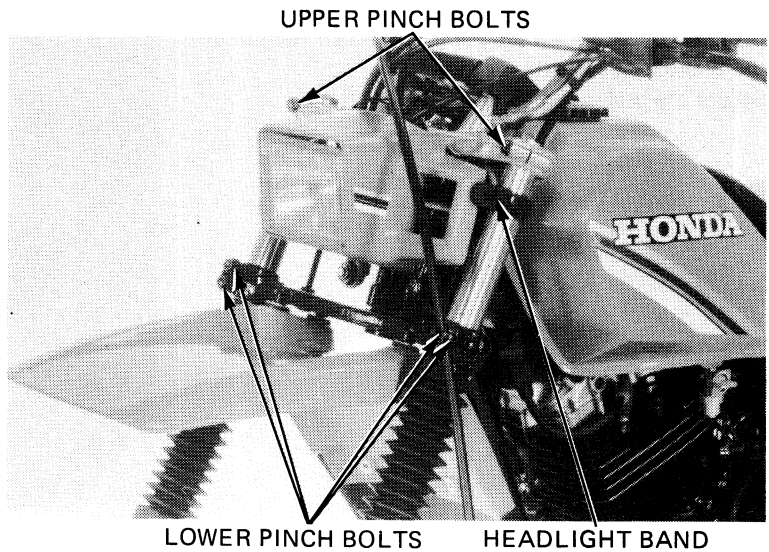

**DISASSEMBLY**

Remove the fork boot.  
Hold the fork tube in a vise with soft jaws or shop towel and remove the fork tube cap.

**CAUTION**

*Do not damage the tube's sliding surface.*

