


Remove the fork springs and spacer.  
Drain the fork fluid by pumping the fork up and down several times.

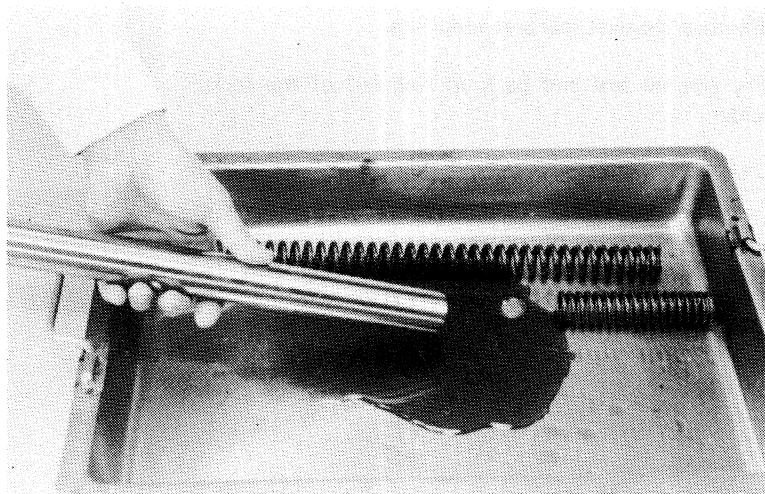


Hold the fork slider in a vise with soft jaws or a shop towel.  
Remove the socket bolt with a hex wrench.

NOTE

Temporarily install the springs and fork cap if the bolt is difficult to remove.

HEX WRENCH 6 mm 07917-3230000 OR EQUIVALENT  
COMMERCIALY AVAILABLE IN U.S.A.

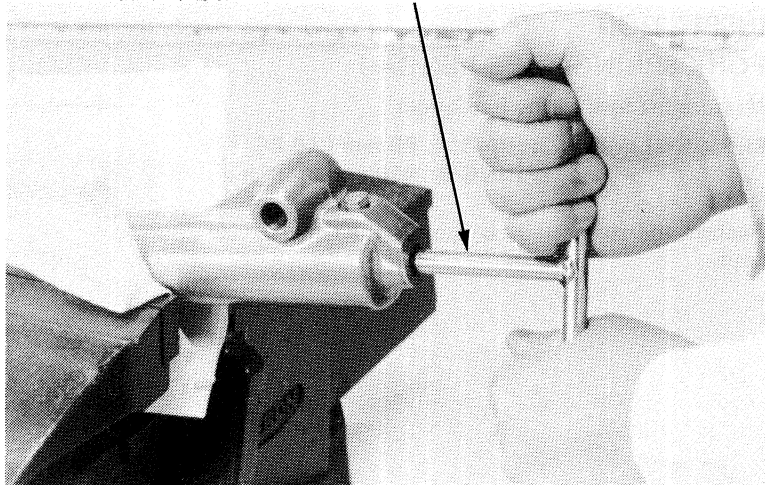

Remove the fork tube, piston, piston ring, lock piece and rebound spring from the slider.

