


FRONT WHEEL/BRAKE/SUSPENSION/STEERING

Remove the dust seal and snap ring.

Pry the oil seal and back-up ring out of the fork slider.

CAUTION

- *Be careful not to damage the fork slider when prying the oil seal and back-up ring.*
- *Replace the oil seal and back-up ring with new ones whenever they are removed.*

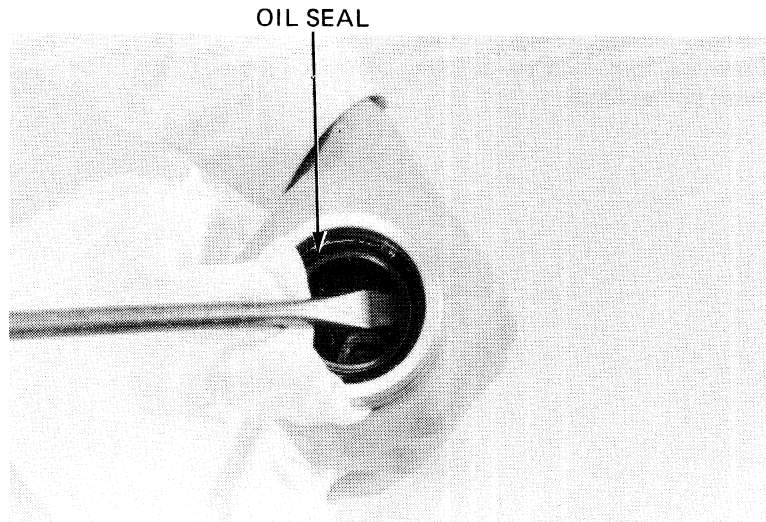


INSPECTION

FORK SPRING FREE LENGTH

Measure the fork spring free length..

SERVICE LIMITS: SPRING A: 98 mm (3.8 in)
SPRING B: 410 mm (16.1 in)

Replace the spring if it is shorter than the service limit.

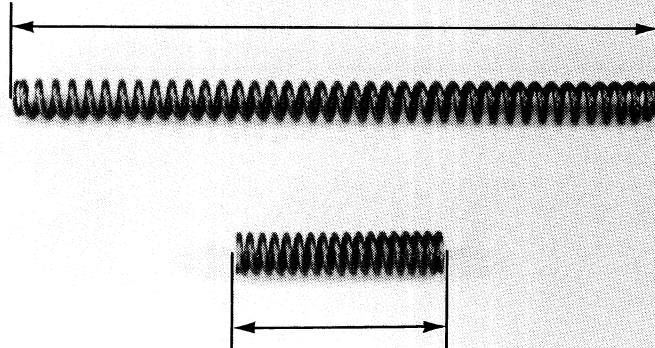

FORK TUBE

Set the fork tube in V blocks and read the runout.

SERVICE LIMIT: 0.20 mm (0.008 in)

