


FRONT WHEEL/BRAKE/SUSPENSION/STEERING


LOWER CONE RACE REPLACEMENT

Inspect the lower cone race for wear or damage and replace if necessary.

Remove the lower cone race, dust seal and washer with a hammer and drift.

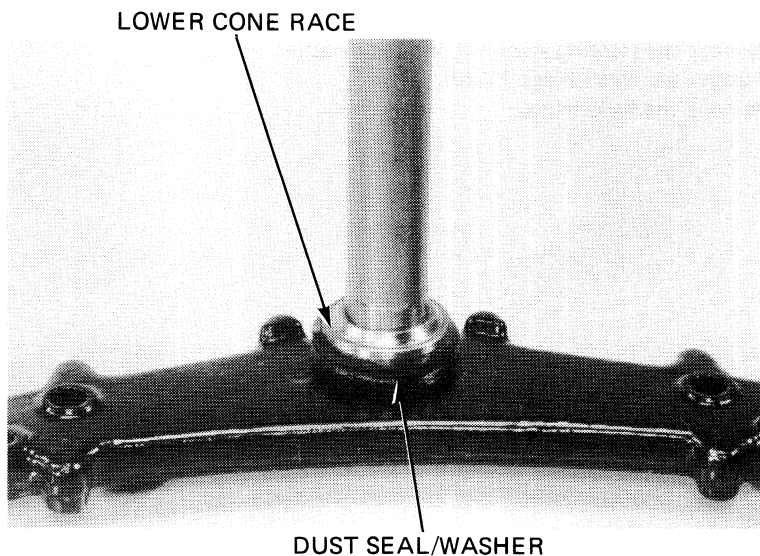

Install a new washer and dust seal and drive a new cone race into place.

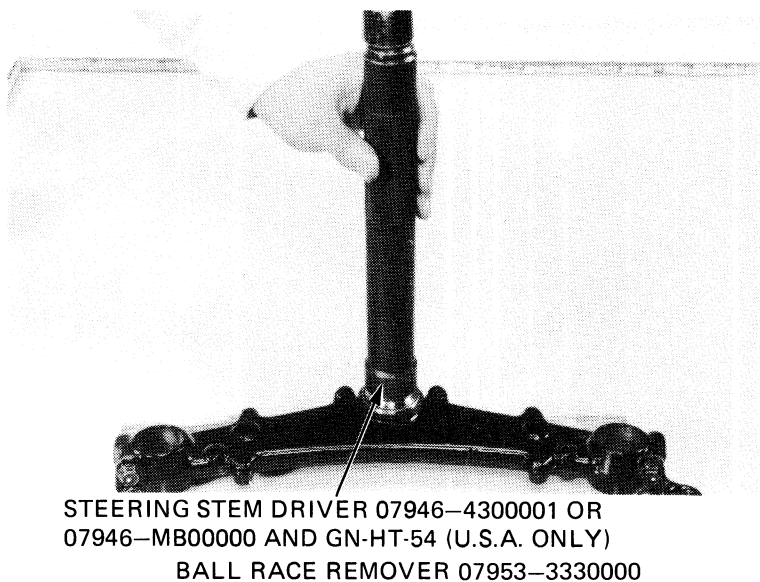

BALL RACE REPLACEMENT

Inspect the upper and lower ball races for wear or damage and replace if necessary.

Remove the upper and lower ball races with the special tool.

NOTE:

If the ATC has been involved in an accident, examine the area around the steering head for cracks.

