



Remove the brake adjusting nuts and disconnect the rear brake cables from the brake arm.

After '85;  
Remove the brake arm gurd.

Remove the brake arm bolt, nut, brake arm, wear indicator plate, spring, brake cam and felt seal.

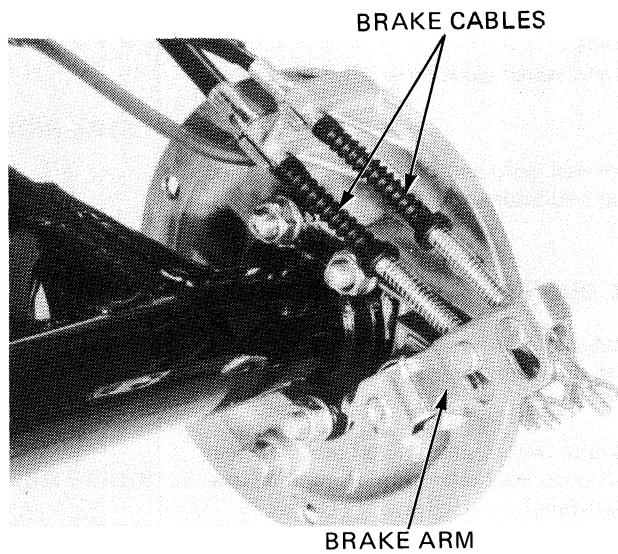

Remove the brake pedal mount nuts and the brake panel.  
Check the rubber seals for wear or damage and replace if necessary.

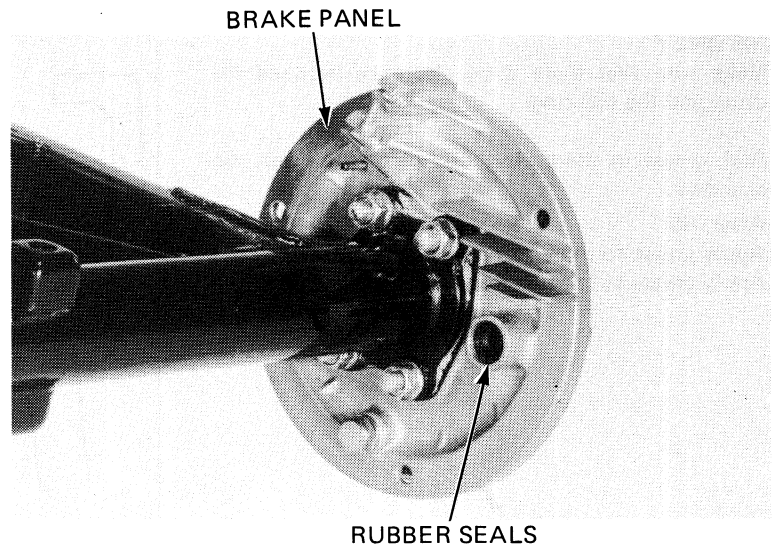

### BRAKE DRUM WATER SEAL REPLACEMENT

'85;  
Remove the seal ring from the brake drum.

Drive the water seal out through the three 8 mm hole in the brake panel.

