

## REAR SHOCK ABSORBER

### REMOVAL

Raise the rear wheels off the ground by placing a jack or block under the engine.

Remove the seat.

Remove the rear shock absorber upper and lower mount nuts and bolts and remove the shock absorber.

### DISASSEMBLY

Set the shock in the compressor as shown and compress the spring 20 mm.

### CAUTION

*Be sure the base is adjusted correctly for the sock spring seat and the clevis pin is all the way in.*

### NOTE


Exchange the base of the shock compressor with 07959-MB10000.

Place the lock nut in a vise and pull the shock rod out.


Loosen and remove the upper joint and lock nut.

Remove the compressor and disassemble the rear shock absorber.

UPPER MOUNT BOLT

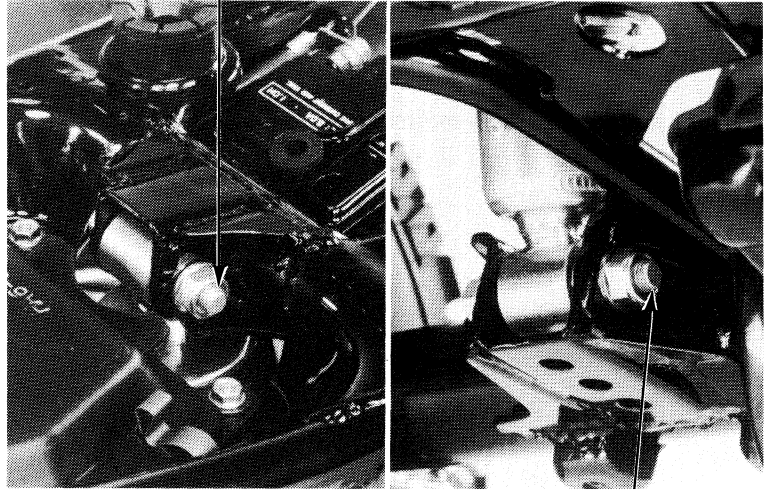

LOWER MOUNT BOLT  
SHOCK ABSORBER SPRING  
COMPRESSOR 07959-3290001

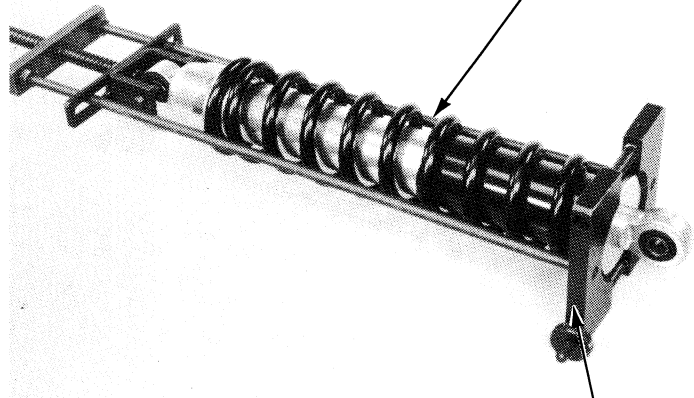

SHOCK ABSORBER BASE  
07959-MB10000

UPPER JOINT

LOCK NUT

