


Remove the gear case mount 10 mm bolts, final gear case, spring and drive shaft from the swing arm.

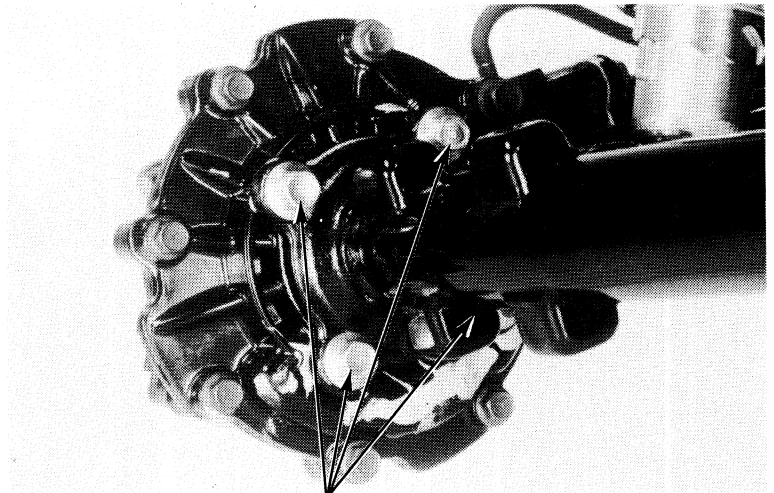

10 mm MOUNT BOLTS

UNIVERSAL JOINT/DRIVE SHAFT

Remove the swing arm (Page 12-15).
Remove the universal joint/drive shaft from the engine output shaft.
Inspect the universal joint bearings for excessive play or damage.
Apply molybdenum disulfide grease to the splines and install the universal joint drive shaft.

Set the universal joint in the compressor as shown and compress the spring.
Remove the stopper ring from the drive shaft.

