


EXHAUST PIPE

WARNING

Do not service the exhaust pipe or muffler when they are hot.

REMOVAL

Remove the seat.
Remove the exhaust pipe clamp bolts.
Remove the exhaust pipe joint nuts and remove the exhaust pipe.
Remove the three muffler mounting bolts and the muffler.

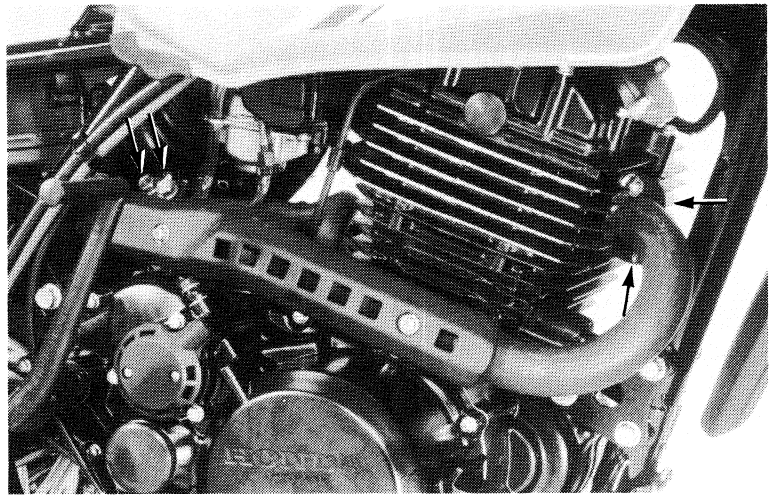

INSTALLATION

Installation is the reverse order of removal.

NOTE

After installing the exhaust pipe, make sure that there are no exhaust leaks.

