

TROUBLESHOOTING

No power—key turned on:

1. Dead battery
2. Disconnected battery cable
3. Main fuse burned out
4. Faulty ignition switch

Low power—key turned on:

1. Weak battery
2. Loose battery connection

Low power—engine running:

1. Battery undercharged
2. Charging system failure
3. Loose connection or short circuit in lighting system

Intermittent power:

1. Loose battery connection
2. Loose charging system connection
3. Loose starting system connection

Charging system failure:

1. Loose, broken, or shorted wire or connection
2. Faulty voltage regulator
3. Faulty alternator