


STARTER SYSTEM

Install the rear cover aligning its slot with the brush holder slot.

Install the starter motor in the reverse order of removal.

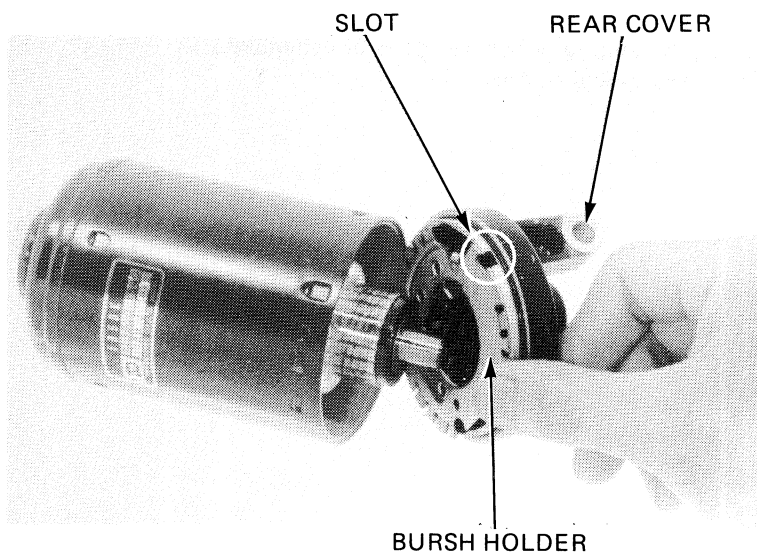


STARTER RELAY

INSPECTION

Remove the seat.

Depress the starter switch button with the ignition switch ON. The coils are normal if the starter relay clicks.

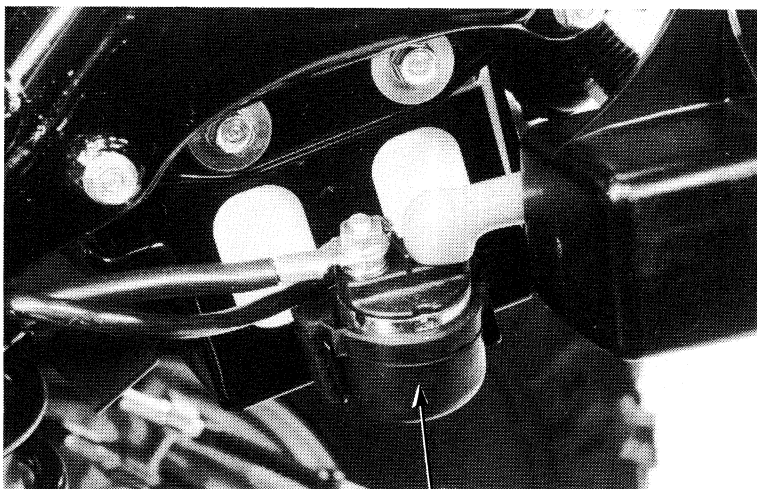

STARTER RELAY

Connect an ohmmeter to the large starter relay terminals.

Connect the Yellow/Red wire to a 12 V battery positive terminal and the Green/Red wire to the negative battery terminal using jumper wires.

Replace the starter relay with a new one if there is no continuity.

