

HANDLEBAR SWITCH

LIGHT/DIMMER SWITCH

Remove the headlight.

Check the switch for continuity between the terminals shown in the table for each switch position.

TERMINAL	TL	C	LO	HI
OFF				
LOW	○	○	○	
(N)	○	○	○	○
HIGH	○	○		○
COLOR	Br	Bl/Br	W	Bu

The switch is normal if there is continuity between the circuits marked "○—○".

ENGINE STOP SWITCH

Remove the headlight.

Check the switch for continuity between the black/white and green terminals with the switch "OFF". The switch is normal if there is continuity between the terminals.

TERMINAL	E	IG
OFF	○	○
RUN		
COLOR	G	Bl/W

STARTER SWITCH

Remove the headlight.

Check the switch for continuity between the Yellow/Red and Black/Brown wires while pushing the starter button.

TERMINAL	ST	E
RELEASED		
PUSHED	○	○
COLOR	Y/R	Bl

