

**After '85:**

- The maintenance intervals shown in the following schedule are based upon average riding conditions. ATC's subjected to severe use, or ridden in unusually dusty areas, require more frequent servicing.

Perform the Pre-ride Inspection in the Owner's Manual at each scheduled maintenance period.

I: Inspect and Clean, Adjust, Lubricate or Replace, if necessary C: Clean            R: Replace L: Lubricate		EVERY	INITIAL SERVICE PERIOD (First week of operation)	REGULAR SERVICE PERIOD (Every 30 operating days)	Refer to page
*	FUEL LINE	YEAR: I			3-7
*	FUEL STRAINER SCREEN	YEAR: C			3-7
*	THROTTLE OPERATION		I	I	3-7
	AIR CLEANER	NOTE 1		C	3-4
	AIR CLEANER CASE BREATHER	NOTE 2		C	3-4
	CRANKCASE BREATHER			I	3-5
	SPARK PLUG			I	3-5
*	VALVE CLEARANCE		I	I	3-5
	ENGINE OIL		R	R	2-2
	ENGINE OIL FILTER		R	R	2-2
*	CARBURETOR-IDLE SPEED		I	I	3-6
	DRIVE CHAIN	NOTE 1	I,L	I,L	3-9
	DRIVE CHAIN SLIDER			I	3-11
	BRAKE FLUID	2 YEARS: R		I	3-13
*	BRAKE PAD WEAR	YEAR: I NOTES 1, 2			3-12
	BRAKE SYSTEM		I	I	3-13
*	CLUTCH SYSTEM		I	I	3-16
*	SUSPENSION			I	3-11
*	SPARK ARRESTER	NOTE 3		C	3-16
	NUT, BOLT, FASTENER		I	I	3-17
**	WHEELS		I	I	3-17
**	STEERING HEAD BEARING	YEAR: I			3-18

\* Should be serviced by an authorized Honda dealer, unless the owner has proper tools and service data and is mechanically qualified.

\*\* In the interest of safety, we recommend these items be serviced ONLY by an authorized HONDA dealer.

- NOTES: 1. Service more frequently when riding in dusty areas, sand or snow.  
 2. Service more frequently after riding in very wet or muddy conditions.  
 3. U.S.A. only