

FUEL LINE

Replace any parts which show signs of deterioration, damage or leaks.

FUEL STRAINER SCREEN

Turn the fuel valve OFF.

Remove the fuel cup, O-ring and filter screen, and drain the gasoline into a suitable container.

WARNING

Gasoline is flammable and is explosive under certain conditions. Do not smoke or allow flames or sparks near the equipment while draining fuel.

Wash the cup and filter screen in clean nonflammable or high flash point solvent.

Reinstall the screen, aligning the index marks on the fuel valve body and filter screen.

Install a new O-ring into the fuel valve body.

Reinstall the fuel cup, making sure the new O-ring is in place. Hand tighten the fuel cup and then torque it to specification.

TORQUE: 3–5 N·m (0.3–0.5 kg·m, 2.2–3.6 ft·lb)

CAUTION

- Do not overtighten the fuel cup.

After installing, turn the fuel valve ON and check that there are no fuel leaks.

THROTTLE OPERATION

Check for smooth throttle lever full opening and automatic full closing in all steering positions.

Make sure there is no deterioration, damage or kinking in the throttle cable. Replace any damaged parts.

Remove the throttle housing cover.

Disconnect the throttle cable at the upper end.

Thoroughly lubricate the cable and pivot point with a commercially available cable lubricant or grease.

Install the throttle cable in the reverse order of removal.

