


## MAINTENANCE

### REAR BRAKE PEDAL HEIGHT


Check that the distance between the pedal and upper face of the foot peg is 0 mm (0 in).

#### CAUTION

- *Incorrect brake pedal height can cause brake drag.*

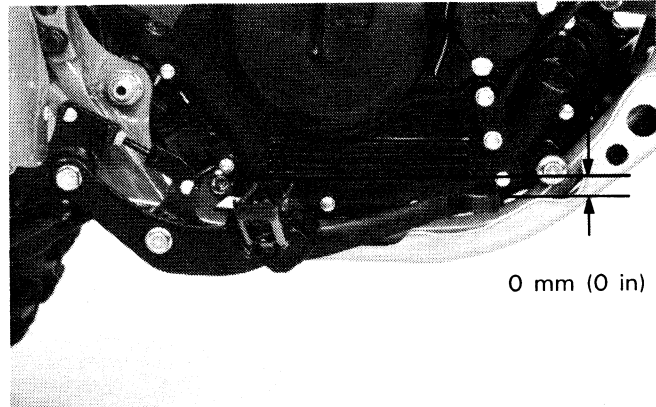

To adjust the height, loosen the lock nut and turn the master cylinder push rod. Tighten the lock nut.

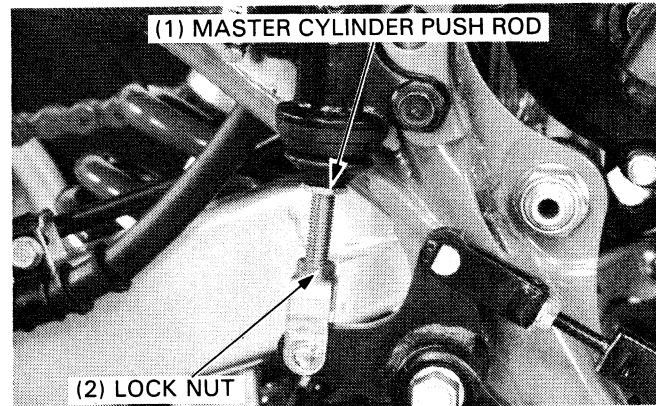


### PARKING BRAKE

A parking brake adjustment may be required if the parking brake does not hold the rear wheels properly: Disconnect the clutch cable at the lower end. Press the parking brake button and pull in the clutch/parking brake lever.

Measure the free play at the tip of the lever.

**FREE PLAY: 31–39 mm (1-3/16–1-1/2 in)**

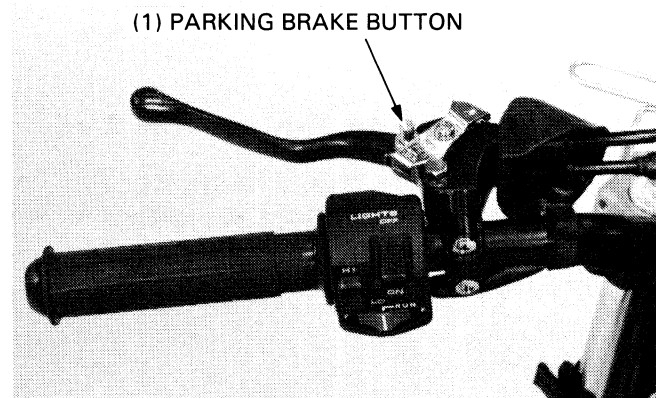

Adjust as follows:  
Loosen the lock nut on the rear caliper.

Screw in the adjusting bolt until you feel resistance without applying the clutch/parking brake lever, and tighten the lock nut.

**TORQUE: 15–20 N·m (1.5–2.0 kg·m, 11–15 ft·lb)**

