

STEERING HEAD BEARINGS

NOTE

- Make sure the cables do not interfere with the rotation of the handlebar.

Raise the front wheel off the ground and make sure that the handlebar rotates freely.

If the handlebar moves unevenly, binds or has vertical play adjust the steering head bearings (page 11-24).

If after adjustment the handlebar still move unevenly binds or has vertical play, inspect the steering head bearings and replace if necessary (page 11-22).

