

FUEL STRAINER CLEANING


Disconnect the fuel tube.
 Drain fuel from the fuel tank into a suitable container.

WARNING

- *Keep gasoline away from flames or sparks.*
- *Wipe up spilled gasoline at once.*

Remove the fuel valve by loosening the valve nut.
 Remove and clean the strainer.

Install the strainer and valve, and attach the fuel line.
 Fill the fuel tank, turn the fuel valve to "ON" and check for leaks.

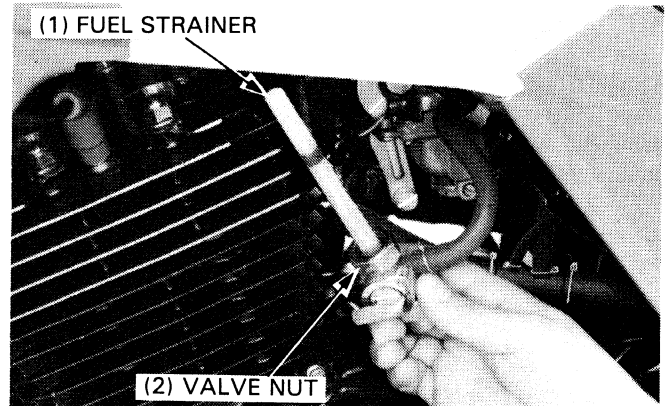

FUEL TANK

Remove the seat/rear fender.
 Turn the fuel valve OFF and disconnect the fuel line at the fuel valve.
 Remove the fuel tank mounting bolts and the tank.

WARNING

- *Keep gasoline away from flames or sparks.*
- *Wipe up spilled gasoline at once.*

Use a drain pan and check that fuel flows freely out of the fuel valve by turning the fuel valve ON.

If flow is restricted, clean the fuel strainer screen (page 3-7) and fuel strainer.
 Check the vent hole in the filler cap for blockage.

Install the fuel tank by sliding its front brackets onto the rubber cushions on the frame and tighten the mounting bolts.

Connect the fuel line to the fuel valve.
 Install the seat/rear fender.

Turn the fuel valve ON and make sure that there are no fuel leaks.

