

FUEL SYSTEM


AIR CLEANER CASE

REMOVAL/INSTALLATION

Remove the seat/rear fender.
Remove the CDI unit from its bracket.

Loosen the air cleaner connecting tube bands.
Remove the air cleaner case mounting bolt and the case.

Install the air cleaner case in the reverse order of removal

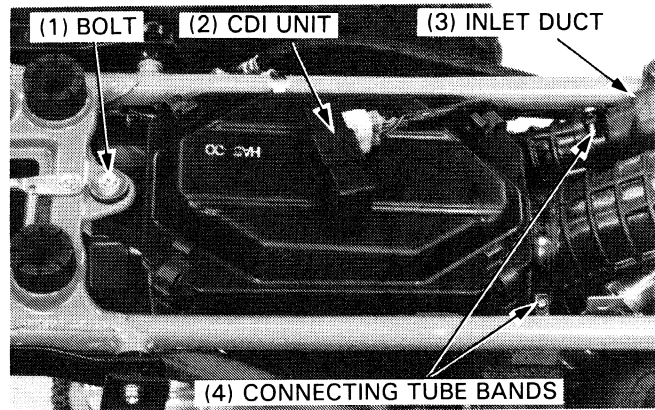

INLET DUCT REMOVAL

Remove the fuel tank (page 4-3).

Loosen the air cleaner inlet connecting tube band.
Remove the inlet duct mount bolt and the inlet duct.

Install the inlet duct in the reverse order of removal.

