

5. ENGINE REMOVAL/INSTALLATION

SERVICE INFORMATION	5-1	ENGINE INSTALLATION	5-3
ENGINE REMOVAL	5-2		

SERVICE INFORMATION

GENERAL

- A floor jack or other adjustable support is required to support and maneuver the engine.
- The following parts or components can be serviced with the engine installed in the frame:
 - Carburetor
 - Oil pump
 - Alternator
 - Rocker arms and camshaft
 - Clutch
 - Kick starter
 - Gearshift linkage

SPECIFICATIONS

Engine dry weight	41.5 kg (91.5 lbs)
Engine oil capacity	2.3 lit. (2.43 US qt, 2.03 Imp qt) after disassembly 1.8 lit. (1.91 US qt, 1.59 Imp qt) after draining

TORQUE VALUES

Engine mounting bolts	
8 mm bolt	24–35 N·m (2.4–3.5 kg-m, 17–25 ft-lb)
10 mm bolt	55–65 N·m (5.5–6.5 kg-m, 40–48 ft-lb)